

Canon


PowerShot G1

DIGITAL CAMERA

Camera User Guide



Flowchart and Reference Guides

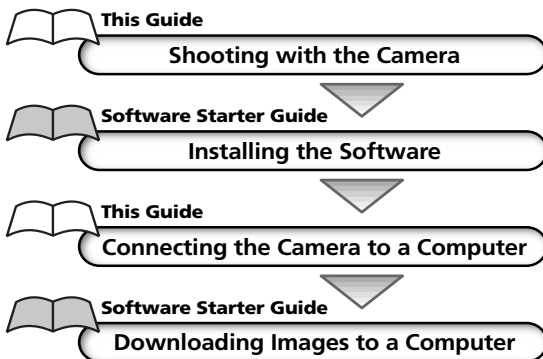

Please start by reading the Precaution on the reverse side of this cover.



ENGLISH

Precaution

Camera Body Temperature

If your camera is used for prolonged periods, the camera body may become warm. Please be aware of this and take care when operating the camera for an extended period.

LCD Monitor

The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification. Less than 0.01% of the pixels may occasionally misfire or appear as red or black dots. This has no effect on the recorded image and does not constitute a malfunction.

Please read the handling and safety precautions starting on page 4 before using the camera.







Disclaimer














- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- Canon Inc. reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon Inc.
- Canon Inc. makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, the CompactFlash™ cards (CF cards), personal computers, peripheral devices, or use of non-Canon CF cards.

Trademark Acknowledgements

- Canon and PowerShot are trademarks of Canon, Inc.
- Adobe and Photoshop are trademarks of Adobe Systems Incorporated.
- CompactFlash is a trademark of SanDisk Corporation.
- iBook and iMac are trademarks of Apple Computer, Inc.
- Macintosh, PowerBook, Power Macintosh and QuickTime are trademarks of Apple Computer, Inc., registered in the United States and other countries.
- Microsoft, Windows and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Table of Contents

Read this First	4
Quick Start	8
Components Guide	10
Front View	10
Back View	11
Controls	12
Main Dial / Mode Dial	13
Display Panel	14
LCD Monitor	15
Preparing the Camera	18
Charging the Battery Pack	18
Installing the Battery Pack	20
Using a Household Power Source	22
Using a Charge Adapter / Car Battery Cable Kit (Optional)	23
Installing a CF Card	26
Attaching the Strap	28
Attaching the Lens Cap	28
Using the Soft Case (Optional)	28
Basic Functions	29
Turning the Power On / Off	29
Setting the Date / Time	30
Switching between Shooting and Replaying	31
Using the LCD Monitor	32
Pressing the Shutter Button	34
Selecting Menus and Settings	35
Shooting - Letting the Camera Select Settings	37
 Auto Mode	37
Checking an Image Right after Shooting	39
Adjusting the Zoom (Focal Length)	40
 Using the Built-In Flash	41
 Pan Focus Mode	43
 Portrait Mode	43
 Landscape Mode	44
 Night Scene Mode	44
BW Black and White Mode	45

	Stitch Assist Mode	46
	Movie Mode	49
	Macro Mode	50
	Self-Timer	51
	Continuous Mode	52
	Digital Zoom	53
Shooting - Selecting Particular Effects		54
	Changing the Resolution and Compression	54
	Changing the File Format	56
P	Program AE	57
Tv	Setting the Shutter Speed	58
Av	Setting the Aperture	60
M	Manually Setting the Shutter Speed and Aperture	62
	Adjusting the Exposure Compensation	63
WB	Setting the White Balance	64
	Auto Exposure Bracketing (AEB Mode)	67
	Adjusting the Flash Output (Flash Exposure Compensation) ...	68
	Locking the Exposure Setting (AE Lock)	69
	Locking the Flash Exposure Setting (FE Lock)	70
	Switching between Metering Modes	72
	Shooting Problem Subjects for the Autofocus	73
	Switching between Focus Settings	76
	Manually Setting Image Characteristics	77
	Resetting the File Number	78
	Functions Available in Each Shooting Mode	79
Replaying		80
	Viewing Images Singly (Single Image Replay)	80
	Magnifying Images	81
	Viewing Nine Images at a Time (Multi Replay)	82
JUMP	Jumping between Images	83
	Viewing Movies	84
	Rotating Images in the Display	85
	Automated Playback (Slide Show)	86
	Protecting Images	90
	Shooting / Replaying with a TV Monitor	91
Erasing		92
	Erasing Images Singly	92
	Erasing All Images	93
	Formatting a CF Card	94

Print Settings (DPOF Settings)	95
Selecting Images for Printing	95
Setting the Print Style	98
Resetting Print Settings	100
List of Menu Options	101
Rec. Menu	101
Play Menu	103
Set up Menu	104
Using the Wireless Controller	106
Installing the Battery	106
Shooting / Replaying	107
Using an Externally Mounted Flash (Optional)	108
Using Conversion Lenses (Optional) / Close-up Lenses (Optional)	110
Installing the Lenses	111
Downloading Images to a Computer	113
Downloading Directly from a CF Card	113
Using the Supplied Interface Cables	116
Appendices	122
Replacing the Button Battery	122
Camera Care and Maintenance	124
Troubleshooting	125
List of Error / Message Codes	127
List of Messages	128
Specifications	130
Index	135
Canon Customer Support	138

Icon Conventions in the Text



This mark denotes topics about issues that may affect shooting.



This mark denotes additional topics that complement the basic operating procedures.



This mark denotes tips about the camera and photography.

Read this First

Please Read

Test Shots

Before you try to photograph important subjects, we highly recommend that you shoot several trial images to confirm that the camera is operating and being operated correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including CompactFlash™ cards, that results in the failure of an image to be recorded or to be recorded in a format that is machine sensible.

Warning Against Copyright Infringement

Please note that Canon digital cameras are intended for personal use and should never be used in a manner that infringes upon or contravenes international or domestic copyright laws and regulations. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

Warranty Limitations

This camera's warranty is only effective in the country of sale. If a problem arises while the camera is in use abroad, please convey it back to the country of sale before proceeding with a warranty claim to a Canon Customer Support Help Desk.

Safety Precautions

- Before using the camera, please ensure that you read and understand the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to instruct you in the safe and correct operation of the camera and its accessories to prevent injuries or damage to yourself, other persons and equipment.
- In the next few pages, the term "equipment" refers primarily to the camera and its power supply accessories.

Warnings

- Do not aim the camera directly into the sun or at other intense light sources that could injure your eyesight.

- Do not trigger the flash in close proximity to human or animal eyes. Exposure to the intense light produced by the flash may injure eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.

- Store this equipment out of the reach of children and infants. Accidental damage to the camera or batteries by a child could result in serious injury. In addition, placement of the strap around the child's neck could result in asphyxiation.

- Be particularly careful to keep the button batteries used in the camera and wireless controller out of the reach of children. Seek medical assistance immediately if a child swallows a battery.

- Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide. Disassembly or alteration may result in high-voltage electrical shock. Internal inspections, alterations and repairs should be conducted by qualified service personnel authorized by your camera distributor or the closest Canon Customer Support Help Desk.

- To avoid the risk of high-voltage electrical shock, do not touch the flash portion of the camera if it has been damaged. Similarly, never touch internal portions of the equipment that become exposed as a result of damage. There is a risk of high-voltage electrical shock. Please take the first opportunity to consult your camera distributor or the closest Canon Customer Support Help Desk.

- Stop operating the equipment immediately if it emits smoke or noxious fumes. Failure to do so may result in fire or electrical shock. Immediately turn the camera's power off, remove the camera battery and unplug the power cord from the electrical outlet. Confirm that smoke or fume emissions have ceased. Please consult your camera distributor or the closest Canon Customer Support Help Desk.

- Stop operating the equipment if it is dropped or the casing is damaged. Failure to do so may result in fire or electrical shock. Immediately turn the camera's power off, remove the camera battery and unplug the power cord from the electrical outlet. Please consult your camera distributor or the closest Canon Customer Support Help Desk.

- Do not allow the equipment to come into contact with, or become immersed in, water or other liquids. Do not allow liquids to enter the interior. The camera has not been waterproofed. If the exterior comes into contact with liquids or salt air, wipe it dry with a soft, absorbent cloth. If water or other foreign substances enter the interior, immediately turn the camera's power off and remove the camera battery or unplug the power cord from the electrical outlet. Continued use of the equipment may result in fire or electrical shock. Please consult your camera distributor or the closest Canon Customer Support Help Desk.

-
- Do not use substances containing alcohol, benzene, thinners or other flammable substances to clean or maintain the equipment. The use of these substances may lead to fire.
-
- Do not cut, damage, alter or place heavy items on the power adapter cord. Any of these actions may cause an electrical short circuit, which may lead to fire or electrical shock. Replace a broken or damaged power adapter cord.
-
- Do not handle the power cord if your hands are wet. Handling it with wet hands may lead to electrical shock. When unplugging the cord, ensure that you hold the solid portion of the plug. Pulling on the flexible portion of the cord may damage or expose the wire and insulation, creating the potential for fires or electrical shocks.
-
- Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards. Use only the recommended power accessories.
-
- Always turn off the computer and unplug the camera from the DC plug before attaching or detaching any interface cables (except for USB cables). The cables carry high-voltage currents and there is a risk of electrical shock.
-
- Do not place the batteries near a heat source or expose them to direct flame or heat. Neither should you immerse them in water. Such exposure may damage the batteries and lead to the leakage of corrosive liquids, fire, electrical shock, explosion or serious injury.
-
- Do not attempt to disassemble, alter or apply heat to the batteries. There is serious risk of injury due to an explosion. Immediately flush with water any area of the body - including the eyes and mouth, or clothing - that comes into contact with the inner contents of a battery. If the eyes or mouth contact these substances, immediately flush with water and seek medical assistance.
-
- Avoid dropping or subjecting the batteries to severe impacts that could damage the casings. It could lead to leakage and injury.
-
- Do not short-circuit the battery terminals with metallic objects, such as key holders. It could lead to overheating, burns and other injuries. Use the supplied terminal cover to transport or store the battery pack.
-
- Before you discard a battery, cover the terminals with tape or other insulators to prevent direct contact with other objects. Contact with the metallic components of other materials in waste containers may lead to fire or explosions. Discard the batteries in specialized waste facilities if available in your area.
-
- Use of batteries not expressly recommended for this equipment may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. Use only recommended batteries and accessories.
-
- Disconnect the compact power adapter from both the camera and electrical outlet after recharging and when the camera is not in use to avoid fires and other hazards. Continuous use over a long period of time may cause the unit to overheat and distort, resulting in fire.
-

-
- The camera terminal of the supplied compact power cord is designed for exclusive use with your camera. Do not use it with other products or batteries. There is a risk of fire and other hazards.
 - Exercise due caution when screwing on the separately sold wide converter lens, tele-converter lens, close-up lens and conversion lens adapter. If they loosen, fall off and shatter, the glass shards may cause an injury. Never aim the lenses at the sun or strong light sources. There is a risk of damage to eyesight.
-

CAUTIONS

- Avoid using, placing or storing the equipment in places subject to strong sunlight or high temperatures, such as the dashboard or trunk (boot) of a car. Exposure to intense sunlight and heat may cause the batteries to leak, overheat or explode, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing. Ensure that there is good ventilation when using the compact power adapter to charge the battery pack or power the camera.
 - Do not store the equipment in humid or dusty areas. Storage in such areas could lead to fire, electrical shock or other damage.
 - Be careful not to bang the camera or subject it to strong impacts or shocks that could lead to injury or damage the equipment when wearing or holding it by the strap.
 - Be careful not to cover the flash with your fingers when shooting. In addition, do not touch the surface of the flash after taking several pictures in rapid succession. Either action could result in burns.
 - If your camera is used for prolonged periods, the camera body may become warm. Please take care when operating the camera for extended periods as your hands may experience a burning sensation.
-

Preventing Malfunctions

Avoid Strong Magnetic Fields

Never place the camera in close proximity to electric motors or other equipment generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.


Avoid Condensation Related Problems

Moving the equipment rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its external and internal surfaces. You can avoid this by placing the equipment in an airtight, resealable plastic bag and letting it adjust to temperature changes slowly before removing it from the bag.

If Condensation Forms Inside the Camera

Stop using the camera immediately if you detect condensation. Continued use may damage the equipment. Remove the CF card and battery or Compact Power Adapter CA-560 (if connected) from the camera and wait until the moisture evaporates completely before resuming use.

Quick Start

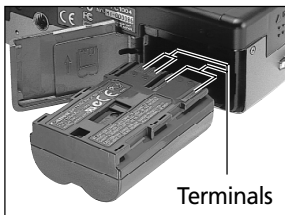

- 1 Install the Battery (p. 20).**
Slide the battery cover lock, push the battery cover open and insert the battery.




- 2 Charge the Battery (p. 18).**
Confirm that the main dial is turned to **OFF**. Charge the battery. The battery is approximately 90% charged (adequate charge for use) when the orange indicator beside the viewfinder stops flashing and changes to a steady orange. After charging, detach the compact power adapter's DC plug from the camera.




- 3 Install the CF card. (p. 26).**
Open the CF card slot and insert a CF card.



- 4 Remove the lens cap.**

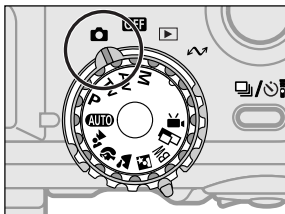


- 5 Turn the power on (p. 29).**
Open the LCD monitor and turn the main dial (lower dial) to (shooting).

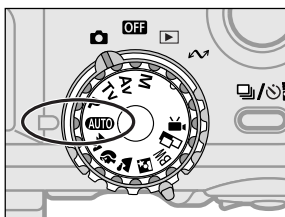

6 Turn the mode dial (upper dial) to **AUTO** (p. 37).



7 Focus (p. 34).
Aim the camera and lightly press the shutter button halfway. Two beeps will sound when the autofocus is set.

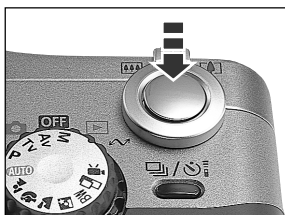

8 Shoot (p. 34).
Press the shutter button all the way. You will hear the sound of the shutter close when the shot is complete.



9 View the recorded image (p. 39).
The recorded image will display in the LCD monitor for approximately 2 seconds. Keep your finger on the shutter button or press the Set button while the image is displayed to continue to display the image after the shutter button is released.




To Immediately Delete the Displayed Image

1. Press the ***** button while the image is displayed.
2. Press the **[>]** arrow on the omni selector to select [OK].
3. Press the Set button.




Components Guide

Front View

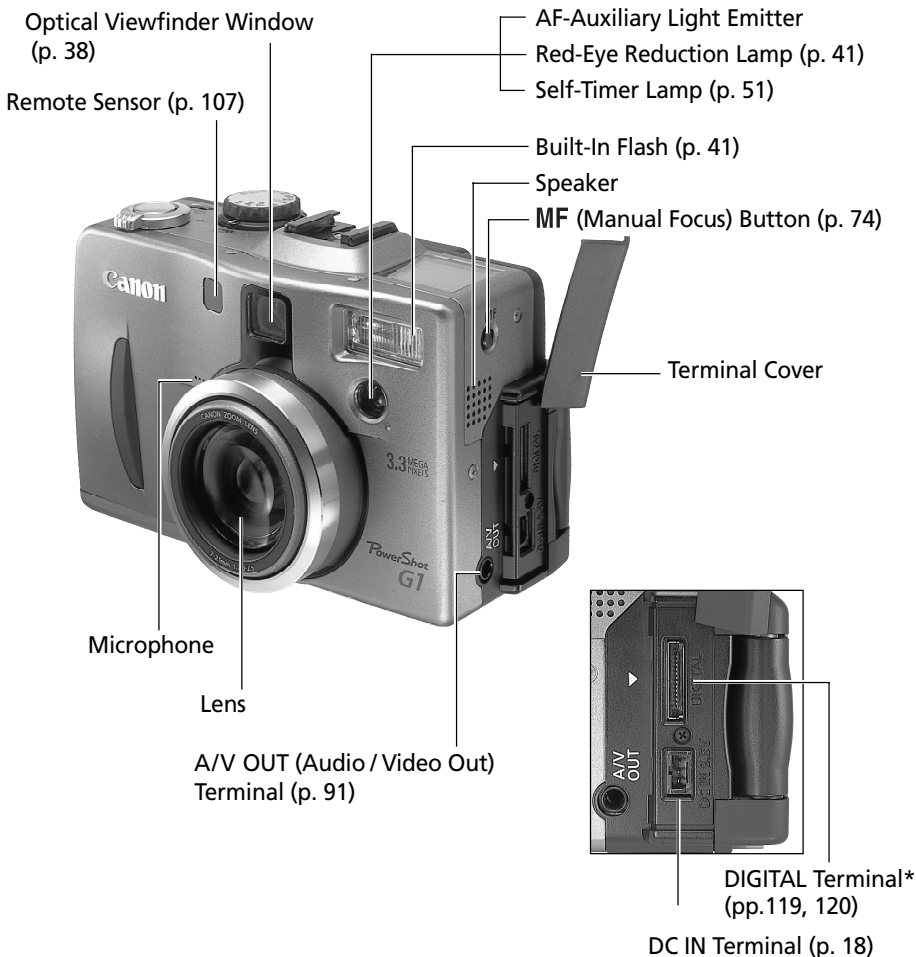


- To connect the camera to the computer with the USB interface, attach the supplied interface cable to the camera's DIGITAL terminal. To connect to a serial port, the separately sold serial cable (IFC-200PCS for Windows and IFC-200MC for Macintosh) is required.

Back View

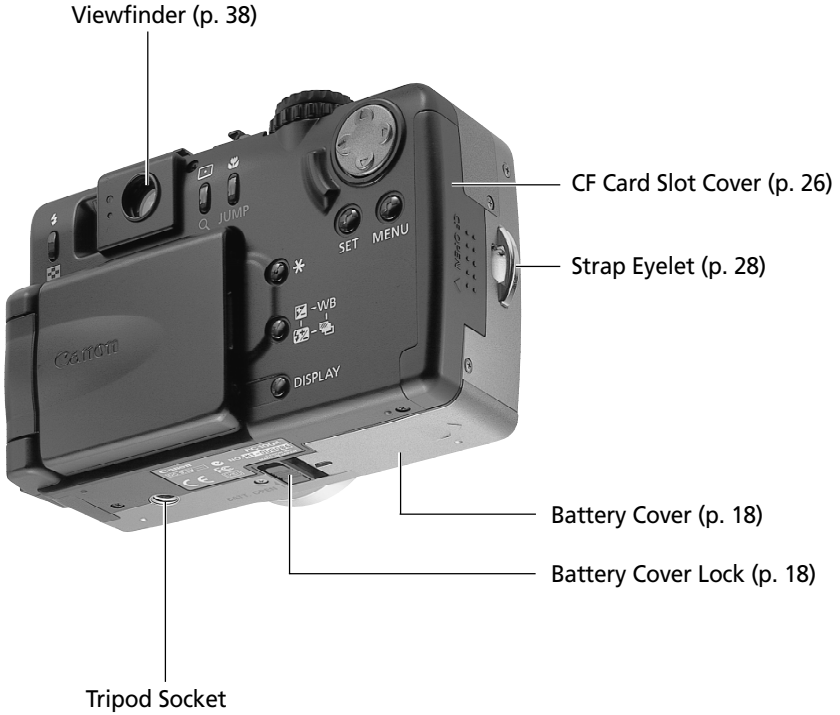

Controls

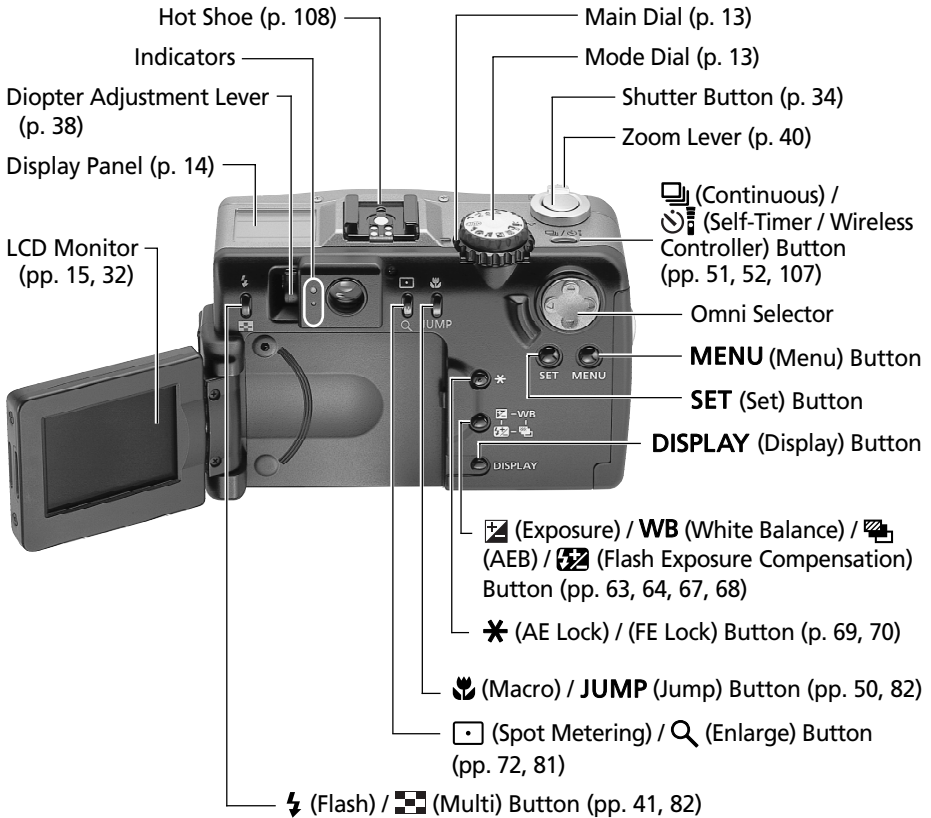

Indicators

Upper Indicator


The indicators shine or flash when the shutter button is pressed or the following operations are underway.

- Green: Ready to record / Battery charge complete (100%)
- Flashing Green: Recording to CF card / Reading CF card / Erasing from CF card
- Orange: Ready to record (flash on) / Battery charge adequate (approximately 90%)
- Flashing Orange: Ready to record (camera shake warning) / Battery is charging

Lower Indicator

- Yellow: Macro mode / Manual focus mode

Main Dial / Mode Dial

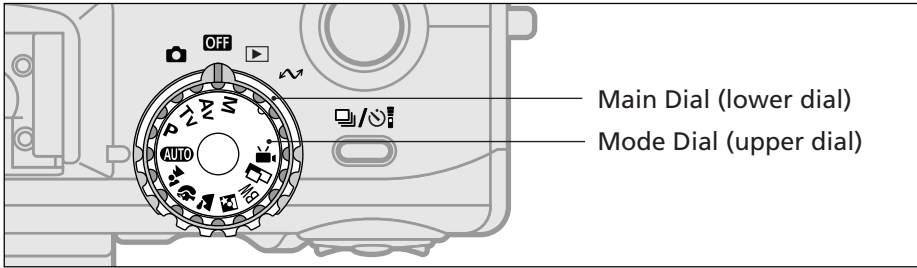

Main Dial

Use the main dial to switch between the power off, shooting, replaying and PC connection modes.

- OFF** : Off (p. 29)
- 📷** : Shooting (p. 31)
- ▶** : Replaying (p. 31)
- 🖱️** : PC Connection (pp. 119, 121)

- The **🖱️** (PC connection) mode is used to download and view images on a computer when the camera is connected via the interface cable. Please read Using the Supplied Interface Cables (p. 116) for connection instructions. The Software Starter Guide, a separate manual, describes how to download and view the images.
- “PC” will show in the display panel when a connection to the computer is opened.


Mode Dial

The mode dial is for selecting a shooting mode when the main dial is set to **📷** (shooting) mode.

- **AUTO** : Auto (p. 37)
- **Image Zone**
 - 🏠** : Pan Focus (p. 43)
 - 👤** : Portrait (p. 43)
 - 🏞️** : Landscape (p. 44)
 - 🌃** : Night Scene (p.44)
 - BW** : Black and White (p. 45)
 - 📷** : Stitch Assist (p. 46)
 - 🎥** : Movie (p. 49)
- **Creative Zone**
 - P** : Program AE (p. 57)
 - Tv** : Shutter Speed-Priority AE (p. 58)
 - Av** : Aperture-Priority AE (p. 60)
 - M** : Manual Exposure (p. 62)

Display Panel

The display panel shows the camera settings, the remaining image capacity, movie shooting time, battery charge and other information.

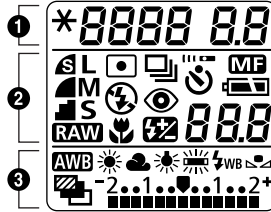

①	*	AE Lock / FE Lock	pp. 69, 70
	8888	Shutter Speed / Movie Shooting Time	-
	8.8	Aperture Setting	-
②		Compression	p. 54
	L M S	Resolution	p. 54
	RAW	File Format	p. 56
		Spot Metering	p. 72
		Single Shot / Continuous Mode	p. 52
		Flash On / Flash Off	p. 41
		Red-Eye Reduction	p. 41
		Macro Mode	p. 50
		Flash Exposure Compensation	p. 68
		Self-Timer / Wireless Controller	pp. 51, 107
	MF	Manual Focus	p. 74
③		Battery Charge State	p. 20
	888	Remaining Image Capacity / Message Code / Error Code	p. 127
	AWB	White Balance Settings	p. 64
		AEB	p. 67
	-2...1...0...1...2+	Exposure Compensation Level / AEB Level / Flash Exposure Compensation Level	pp. 63, 67, 68



- The diagram above shows all the icons appearing at once. Normally, only the icons applicable to the selected mode and camera state appear.

LCD Monitor




Switching between Modes

Pressing the Display button switches the LCD monitor display mode.


Shooting

- Pressing the Display button cycles the LCD monitor to the next mode each time the button is pressed. The order is on (no information) / on (information view) / off.




- The LCD monitor's display mode [on (no information); on (information view); LCD monitor off] is memorized when the camera is turned off. When the camera is turned on again it assumes the last mode. However, when the LCD monitor is turned on and the low battery icon  appears, the LCD monitor may not automatically turn on the next time the camera is started.
- Changing the shooting mode will cause the LCD monitor to display relevant information for about six seconds when it is turned on regardless of whether the information view mode is on or off.
- Setting the mode dial to  or  turns on the LCD monitor regardless of whether it is set to on or off.



- The camera shake warning icon  will appear at the center of the LCD monitor in low light conditions while the camera is preparing to shoot. When this icon appears, use the flash or fix the camera to a tripod to shoot.

Replaying

- The LCD monitor turns on when the main dial is turned to .
- Pressing the Display button switches the information view mode.
Single Replay: Simple Display → Detailed Display → No Display
Multi Replay: Simple Display → No Display

Information Displayed on the LCD Monitor

The LCD monitor displays information in the shooting or replaying mode, such as the camera settings, remaining image capacity and shooting date / time.

Shooting



Aperture Setting
MF (Manual Focus) Indicator

Shutter Speed

The following displays in information view.

	Shooting Mode	p. 13
	Flash	p. 41
	Drive Mode	pp. 51, 52
	Spot Metering	p. 72
	White Balance	p. 64
	Exposure Level	p. 63
	AEB Mode	p. 67
	Flash Exposure Compensation	p. 68
	Externally mounted Flash Charging Complete	—
	AE Lock / FE Lock	pp. 69, 70
	Macro Mode	p. 50
	Manual Focus	p. 74
	Digital Zoom Setting	p. 53

- The icons in the shaded boxes above display even when the information view is turned off.
- In addition to the above, the shutter speed, aperture setting and MF indicator (when manual focus is selected) are displayed as in the example to the left.

▶ Replaying



Image Number and Total Shooting Date / Time



Aperture Setting
Shutter Speed
ISO Speed Setting

In simple display mode, the following information displays.

- File Number
- Image Number (Displayed Image / Total)
- Shooting Date / Time
- : Compression Setting
- **L M S** : Resolution Setting
- **RAW** : File Format
- **AVI** : Movie
- Protection Status ()

In the detailed display mode, the following information also displays.

	Shooting Mode	p. 13
	Exposure Compensation	p. 63
	White Balance	p. 64
	Spot Metering	p. 72
	Flash Exposure Compensation	p. 68

* In addition to the above, the ISO speed, shutter speed and aperture setting are displayed as in the example to the left.

The following information may also appear with some image files.


	Audio file is attached (wav file).
	An audio file other than a wav file or a file with an unrecognized format is attached.
	A JPEG file not supported by "Design rule for Camera File system" standards.

Preparing the Camera


Charging the Battery Pack

Use the following procedures to charge the battery pack the first time and subsequently when the low battery icon (⚡) and Lb (Lb) message flash.


1 Turn the main dial to **OFF**.

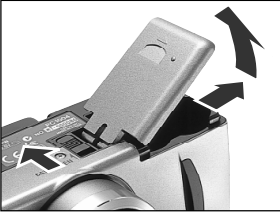


2 Slide the battery cover lock in the direction of the arrow and open the battery cover.

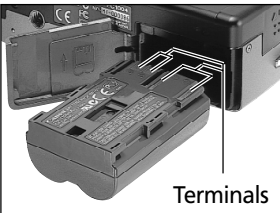

3 Insert the battery pack and close the battery cover.

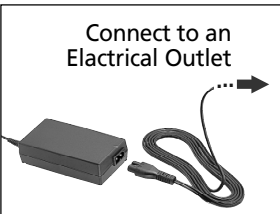

4 Attach the power cord to the compact power adapter and plug it into an electrical outlet.

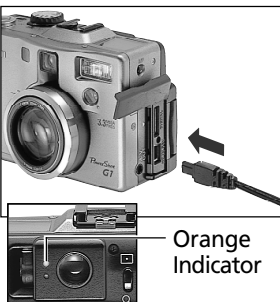

5 Connect the DC plug of the compact power adapter to the camera's DC IN terminal.

- The indicator beside the viewfinder will flash orange while the battery pack is charging and change to steady orange when it is approximately 90% charged, which is adequate for use. If it is charged for approximately two more hours, it will become fully charged and the indicator will switch to green.



- After charging the battery, remove it from the camera if the camera will not be used.



- If the main dial is set to any position other than **OFF** while charging, the battery pack will stop charging and the household electrical current will power the camera.
- This is a lithium ion battery pack so there is no need to completely use or discharge it before recharging. It can be charged at any charge state.
- It takes approximately 80 minutes to bring a fully discharged battery pack to a charge state of approximately 90% (adequate charge for use). It takes approximately two more hours to charge it fully (based on standard Canon testing criteria). Charge it within a temperature range of 5 to 40° C (41 to 104° F).
- Charging times will vary according to the surrounding humidity and battery pack charge state.


Battery Pack Handling Precautions

- Keep the battery pack and camera terminals (+ - D B) clean at all times. Dirty terminals may cause a poor contact between the battery pack and camera. Polish the terminals with a tissue or a dry cloth before charging or using the battery pack.
- Do not cover the compact power adapter with anything, such as a tablecloth, cushion or blanket, when it is charging. Heat will build up internally and possibly lead to fire.
- Do not charge batteries other than Battery Pack BP-511 with the supplied equipment. It could damage the camera.
- The battery pack continues to discharge a small amount when left in the camera even with the power turned off. This shortens the battery life. Remove it from the camera, attach the supplied terminal adapter and store it in a cool, dry place. Charge it before use.
- Even charged battery packs continue to discharge naturally. You are advised to charge the battery on the day of use, or one day before, to ensure a full charge. Storing fully charged battery packs may shorten battery life and diminish performance.
- The camera consumes the battery charge when the power is on even when a function is not being used. To conserve the battery charge, be particularly attentive in turning the power off.
- Although the battery pack's maximum operating range is 0 to 40° C (32 to 104° F), the optimal range is 10 to 30° C (50 to 86° F). At cold temperatures, such as those experienced on ski hills, performance will temporarily decline, reducing the usable time before recharging.
- If the usable time of a battery pack diminishes substantially even when fully charged, it should be replaced.


Installing the Battery Pack

Install Battery Pack BP-511 (supplied) into the camera as follows. Use a household power source to power the camera for extended periods (p. 22).

1 Turn the main dial to **OFF**.

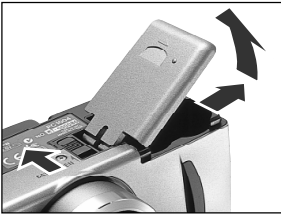

2 Slide the battery cover lock in the direction of the arrow and open the battery cover.

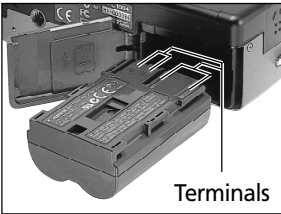

3 Insert the battery pack as shown.




4 Close the battery cover.



- Charge the battery pack before using it the first time (p. 18).
- The flashing green indicator signals that the CF card is being written to, read, or erased. Never open the battery cover or remove the battery while it is flashing.
- Remove the battery pack when the camera is not in use.



Battery Status Symbols

- The following icons indicate the battery status. These icons will not appear while the camera is plugged into a household power source.
 -  (Steady): Sufficient battery charge
 -  (Flashing): Low battery
 -  (Flashing): Replace or recharge battery

Battery Performance

	Number of Images Shot		Replay Time
	LCD Monitor On	LCD Monitor Off	
Battery Pack BP-511 (full charged)	Approx. 260 images	Approx. 800 images	Approx. 160 minutes

- The data above will vary according to the shooting conditions and settings.
- Movie data is excluded.
- At low temperatures, the battery pack performance may diminish and the low battery icon appear very rapidly. In these circumstances, the performance can be improved by warming the battery pack in a pocket before use.


<Test Conditions>

Shooting: Room temperature (23° C, 73° F), alternating maximum wide angle and maximum telephoto shots at 20-second intervals with flash fired once every four shots and camera power turned off and on every eighth shot. CF card used.

Replaying: Room temperature (23° C, 73° F), continuous playback at one image per 5 seconds. CF card used.

Using a Household Power Source

You are advised to use a household power source for long periods of use and for connecting to a computer.

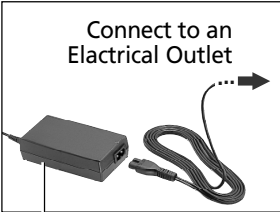

Compact Power Adapter
CA-560



1 Attach the power cord to the compact power adapter and plug it into an electrical outlet.

2 Open the terminal cover and connect the DC plug of the compact power adapter to the camera's DC IN terminal.

- Always disconnect and unplug the compact power adapter after use.



- Always turn the camera's power off before connecting or disconnecting the compact power adapter.
- Battery Pack BP-511 cannot be charged while the compact power adapter is being used to run the camera (main dial is set to any position other than Off).
- Do not use Compact Power Adapter CA-560 to power to any device other than one for which Battery Pack BP-511 is specified.

Using a Charge Adapter / Car Battery Cable Kit (Optional)

Charge Adapter / Car Battery Cable Kit CR-560 (optional) can be used to charge battery packs or to power the camera from a car's cigarette lighter socket. You can also charge a battery pack from a household power source without using the camera by connecting Compact Power Adapter CA-560 (supplied with the camera) to Charge Adapter / Car Battery Cable Kit CR-560.

Using a Car Cigarette Lighter Socket as a Power Source



Charge Adapter

1 Attach the DC cable and car battery cable to the charge adapter.



2 Connect the DC cable to the camera's DC IN terminal.

- Confirm that the camera's main dial is turned to **OFF**.



3 With the engine running, plug the car battery cable into the car's cigarette lighter socket.


- Be sure to have the engine running when you unplug it too.

4 Turn the camera on.



- Always ensure that the car's engine is running when you use Charge Adapter / Car Battery Cable Kit CR-560. Use of the kit without the engine running may flatten the car battery. Always unplug the kit before turning off the engine.

Charging the Battery Pack

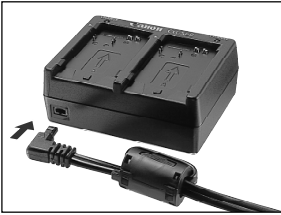

- 1** Attach the car battery cable to the charge adapter.



- 2** With the engine running, plug the car battery cable into the cigarette lighter socket.




- 3** Attach the battery pack.
 - Align the battery pack with the ▲ mark on the charge adapter and slide it in the direction of the arrow.
 - Up to two Battery Pack BP-511s can be placed in the charge adapter simultaneously.
 - Either slot, A or B, can be used to charge a single battery pack. When two are placed in the charge adapter, the first one to be installed will start charging. The second battery pack will start charging after the first has been fully charged.
 - If two battery packs have been placed in the charge adapter before it is plugged into the cigarette lighter socket, the one placed in the A side will charge first. (B side will start after A side is fully charged.)
 - The red light will flash while a battery pack is charging and shine steady when it is charged.
 - It takes approximately 80 minutes to fully charge a single battery pack.
- 4** After charging, remove the battery pack.
 - Remove the battery pack by sliding it in the opposite direction from which it was installed.

5 With the engine running, unplug the car battery cable from the socket.

- Whenever you turn the engine off, the battery will stop charging, so be sure to unplug the charge adapter from the cigarette lighter socket.
- Wait until the engine is running again to plug it back into the cigarette lighter socket and resume charging.


Charging with the Compact Power Adapter

Battery packs can also be charged in the charge adapter using a household power source by attaching Compact Power Adapter CA-560 in place of the car battery cable. This allows you to use the camera while your other battery packs are charging.

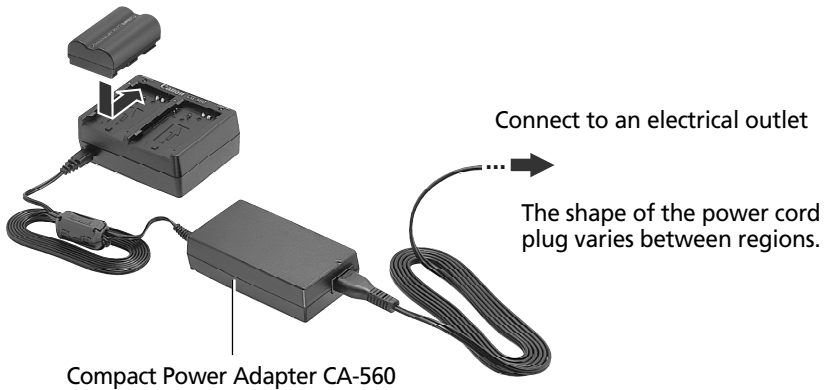


Installing a CF Card

1 Turn the main dial is set to **OFF**.

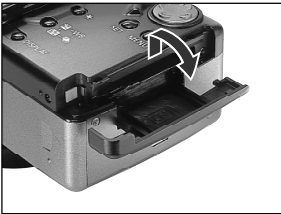



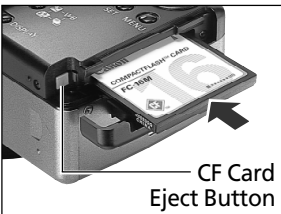






2 Slide the CF card cover in the direction of the arrow and lift it open.






3 Insert the CF card with the label facing up and the arrow pointing in.

- Push the card in until the CF card eject button fully extends.
- To remove the CF card, push the CF card eject button and pull the card out.

CF Cards and Estimated Capacities (Recordable Images)

		FC-8M	FC-16M	FC-32M	FC-64M	FC-128M
L (Large)	2048 x 1536 pixels	 3	8	17	35	71
		 7	15	32	64	130
		 15	32	64	130	261
M (Medium)	1024 x 768 pixels	 12	25	51	103	207
		 22	45	91	183	368
		 41	84	170	342	684
S (Small)	640 x 480 pixels	 26	54	109	220	441
		 46	94	189	379	760
		 79	161	323	648	1298*
RAW	2048 x 1536 pixels	2	5	11	24	49
Movie	320 x 240 pixels	30 sec.	62 sec.	124 sec.	250 sec.	502 sec.

* Figures over 1000 display as "999" since the display panel can only show up to three digits.

- For movies, time figures are displayed as if the movies were shot continuously. A movie file, however, has a maximum length of approximately 30 seconds.
- These figures reflect standard shooting conditions established by Canon. Actual totals may vary according to the subject, shooting conditions and shooting mode.
-  Superfine,  Fine and  Normal indicate the relative compression ratio.




- The indicator flashes green whenever data is being read from, written to or erased from the CF card. Never turn off the power or remove the CF card when the indicator flashes.
- Never open the CF card slot cover when the power is on.
- Please note that CF cards formatted in or edited with other manufacturer's cameras or application programs may not operate correctly in the camera.

CF Card Handling Precautions

- CF cards are high-precision electronic devices. Do not bend, force, or subject them to shocks or vibration.
- Do not attempt to disassemble or alter a CF card.
- Moving a CF card rapidly between temperature extremes may cause condensation to form in the card, leading to potential malfunctions. To avoid condensation formation, place the CF card in a sealed plastic bag before moving it into a different temperature zone and allow it to adjust slowly to the new temperature. If condensation forms on the CF card, put it aside until the water droplets have evaporated completely.
- Place the CF card in the supplied case for storage.
- Do not use or store CF cards in the following types of location.
 - Locations subject to dust or sand
 - Locations subject to high humidity and high temperatures

Attaching the Strap

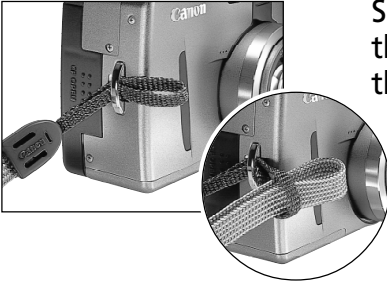

Slip the small loop of the strap through the strap eyelet on the camera and through the hand loop.



- Avoid waving the camera about or catching it on other items when suspending it from the strap.

Attaching the Lens Cap



Fit the lens cap over the lens casing so that it covers the entire lens. Always replace the lens cap after use.



- Attach the lens cap cord to the strap or strap eyelet.
- Remove the lens cap before turning on the camera power.



Using the Soft Case (Optional)



The soft case can be used to carry the camera, battery pack, CF card and the wireless controller.



- Optional soft case appearance and specifications may vary according to region.



Setting the Date / Time

- 1 Turn the main dial to  or .



 - The camera will power up.

- 2 Press the Menu button.

 - The  (Rec.) or  (Play)] menu will display.





- 3 Press the  arrow on the omni selector to select the  (Set up)] menu.

 - Pressing the Jump button also switches between menus.

- 4 Press the  or  arrow on the omni selector to select [Date/Time], then press the Set button.


 - The factory default for the date format may differ from that shown here in some regions.


- 5 Set the date and time.

 - Press the  or  arrow on the omni selector to move between fields.
 - Press the  or  arrow on the omni selector to set the values.

- 6 Press the Set button.

 - After adjusting the settings, press the Menu button to close the menu window.

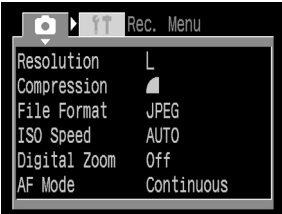


 (Rec.) Menu.




- If the Set Date/Time menu appears when the camera is turned on, it means that the date battery (button battery) charge is low and that the settings have been lost. Reset the date and time after you replace the button battery (p. 122).
- The date can be set up to the year 2030.

Switching between Shooting and Replaying

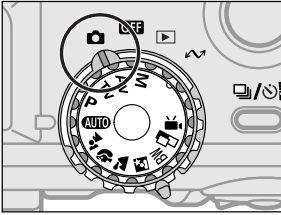


Shooting

- Turn the main dial to .

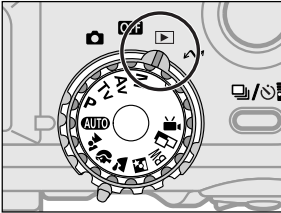

Replaying


- Open the LCD monitor and turn the main dial to . If you switch rapidly to replay mode directly from shooting mode, the lens may not retract. This is convenient when you wish to shoot again after checking or deleting an image immediately after it is shot.
- Be careful not to touch the lens while in replay mode.

Using the LCD Monitor

The LCD monitor can be used to confirm an image during shooting, to replay recorded images or to adjust menu settings. It can be opened to the following range of positions.



- Opened left to right 180 degrees. It locks temporarily at 90 degrees.

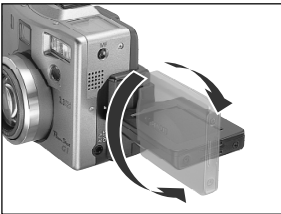

- Tilted forward 180 degrees toward the lens or backward 90 degrees.



- The LCD monitor will automatically turn off when it clicks shut against the camera body. For protection, always close the LCD monitor after use.




- Prevent the DC cable from touching the LCD monitor when the camera is connected to a household power source.




- If the LCD monitor is difficult to see because of the surrounding light conditions, you can adjust it in the [Set up] menu with the [LCD Brightness] option (p. 104).

The LCD monitor can also be positioned as below.

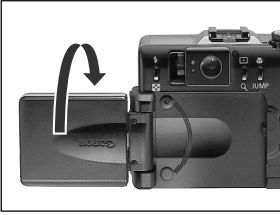

1 Open the LCD monitor left 180 degrees and tilt it 180 degrees toward the lens.

- In this position, icons and messages do not appear on the LCD monitor.
- The image shown on the LCD monitor is automatically flipped and reversed so that it appears correctly from in front of the lens.

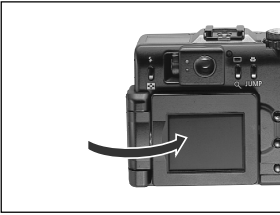


2 Fold the LCD monitor back against the camera body.

- Fold it until it clicks into place against the camera body. If it is not fully closed, the image will appear reversed and icons and messages will not display
- Icons and messages will appear and images will show properly (not reversed) when the LCD monitor is folded right against the camera until it clicks.


Pressing the Shutter Button

The shutter button features a two-stage action.

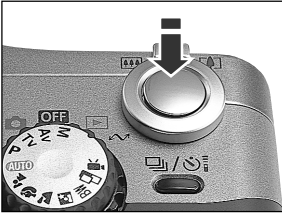

Pressing Halfway

- Pressing halfway automatically sets the exposure, focus and white balance. When metering is complete, two beeps sound and the indicator shines green. When the flash is on, the indicator shines orange. If the indicator is flashing orange, it warns of possible camera shake or low light. In macro or manual focus mode, the yellow indicator will also shine.

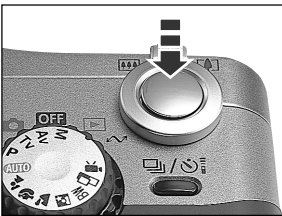

Pressing Fully




- You will hear the sound of the shutter close (shutter sound) when the shot is complete. Do not move the camera until it sounds. The indicator will flash green while the image is still recording onto the CF card. When the flashing orange indicator warns of camera shake or low light, you can still take the shot by pressing the shutter button fully.











- Images are first saved into the camera's internal memory before being recorded onto the CF card, allowing the next images to be taken immediately as long as sufficient space is available in the internal memory.
- The beep and shutter sound can be set On / Off in the Set up menu (p. 104).
- When the shutter sound is set to Off, but the beep is set to On, one beep will sound when the shutter button is fully pressed.
- There is no shutter sound in movie mode.

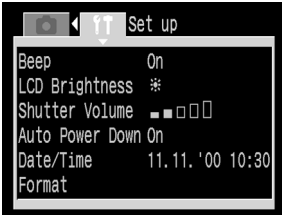
Selecting Menus and Settings





Menus are used to adjust shooting, replaying, date / time and electronic sound settings. Watch the LCD monitor while performing the following procedures.


- 1 Press the Menu button.**
 - In  mode, the  (Rec.) menu will appear.
In  mode, the  (Play) menu will appear.

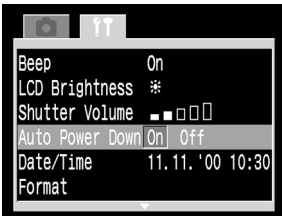





- 2 Press the  or  arrow on the omni selector to switch between menu tabs.**
 - Pressing the  arrow displays the  (Set up) menu, while the  arrow displays either the  (Rec.) or  (Play) menu.
 - Pressing the Jump button also switches between the menu tabs.

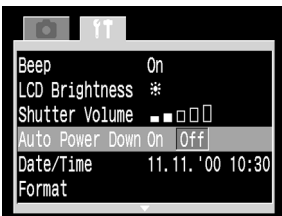

- 3 Press the  or  arrow on the omni selector to select a menu item.**
 - The  arrow selects the next item, the  arrow the previous one.









- 4 Press the  or  arrow on the omni selector to select setting contents.**
 - The  or  arrow switches between settings.
 - Press the Set button for items followed by an ellipsis (...) and then select a setting. Press the Set button again to confirm the setting.

- 5 Press the Menu button.**
 - Pressing the Menu button closes the menu and makes the settings take effect.
 - In shooting mode, the menu can be closed by pressing the shutter button halfway.

Menu Settings and Factory Defaults

This chart shows the options for each menu and the default settings.

	Menu Item	Available Settings	Reference Page
 Rec. Menu (Red)	Resolution	L (2048 x 1536*) / M (1024 x 768) / S (640 x 480)	p. 54
	Compression	 (Superfine) /  (Fine*) /  (Normal)	p. 54
	File Format	JPEG* / RAW	p. 56
	ISO Speed	50* / 100 / 200 / 400 / AUTO	p. 77
	Digital Zoom	Off* / 2x / 4x	p. 53
	AF Mode ⁽¹⁾	Continuous* / Single	p. 76
	Review	Off / 2 sec.* / 10 sec.	p. 39
	File No. Reset	On / Off*	p. 78
	Contrast	- / 0* / +	p. 77
	Sharpness	- / 0* / +	p. 77
	Saturation	- / 0* / +	p. 77
 Play Menu (Blue)	Single Erase	Erases images one-by-one	p. 92
	Erase all	Erases all images on the CF card	p. 93
	Protect	Turns image protection on and off	p. 90
	Rotate	Rotates the image in the display	p. 85
	Slide Show	Replays selected images as in a slide show	p. 86
	Print Order	Sets the print settings	p. 95
 Set up Menu (Yellow)	Beep	On* / Off	p. 34
	LCD Brightness	Normal* / Bright	p. 104
	Shutter Volume (Shooting)	Off / 1 / 2* / 3 / 4 / 5	p. 34
	Speaker Volume (Replaying)	Off / 1 / 2 / 3* / 4 / 5	p. 84
	Auto Power Down	On* / Off	p. 104
	Date/Time	Sets the date and time	p. 30
	Format	Formats (initializes) the CF card	p. 94
	Language	▶ English* / Deutsch / Français / Español / Japanese ▶ English / Deutsch / Français / Nederlands / Dansk / Suomi / Italiano / Norsk / Svenska / Español	p. 105
Video System	NTSC / PAL	p. 105	

* Default values. Default languages and video system settings vary between regions.


⁽¹⁾ The setting is set to Single when the optical viewfinder is used without the LCD monitor.

- Some menu items are not available in certain shooting modes.

Shooting - Letting the Camera Select Settings

AUTO Auto Mode


In this mode, all you have to do is press the shutter button and let the camera do everything else.

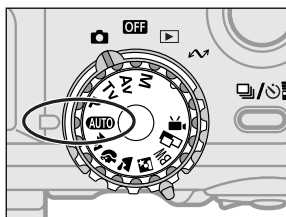

1 Turn the mode dial to **AUTO**.

2 Aim the camera at the subject.

3 Operate the zoom lever to achieve the desired composition (relative subject size in the viewfinder).

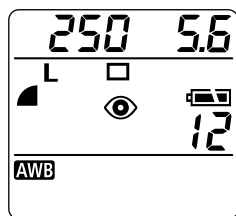

4 Press the shutter button halfway (p. 34).

- The camera will focus on the subject and beep twice when complete.
- The shutter speed and aperture settings are automatically determined and show in the display panel. They also appear on the LCD monitor if it is on.



5 Press the shutter button all the way (p. 34).

- You will hear the sound of the shutter when the shutter activates.
- The picture will appear for 2 seconds in the LCD monitor if it is open.




- You can change the following settings.
 - Resolution: Large* / Medium / Small
 - Compression: Superfine / Fine* / Normal
 - Digital Zoom: Off* / On
 - AF Mode: Continuous* / Single
 - Review: 2 sec* / 10 sec. / Off
 - File No. Reset: Off* / On
 - Flash: Red-Eye Reduction Auto* / Auto / Off (external flash included)
 - Drive Method: Single* / Self-Timer
 - Macro: Off* / On
- * Default settings
- With the Review function, you can change the length of time images show in the LCD monitor after shooting, or set it so they do not show at all (p. 39).



Using the Viewfinder to Shoot

The camera is equipped with an optical viewfinder. When looking through the viewfinder, be sure to aim the autofocus crosshairs right at your subject.

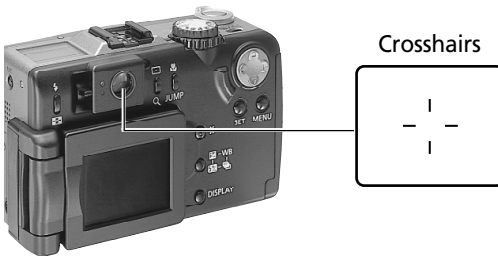

When looking through the viewfinder to shoot, adjust the diopter adjustment lever until the crosshairs are as sharp as possible.



Diopter Adjustment Lever

Checking an Image Right after Shooting

Checking the Image

The following explains ways to view the photographed image in addition to viewing it for 2 seconds in the LCD monitor when it has been opened.

Keeping the Shutter Button Pressed

The image will continue to display in the LCD monitor as long as you keep the shutter button fully depressed.

Pressing the Set Button

If you press the Set button while the image is displayed in the LCD monitor, it will continue to display even after the shutter button is released. Press the shutter button halfway again to stop displaying it.



- There is a shortcut for erasing the image while it is displayed (p. 9).

Changing the Image Display Duration


With the Review function set to the default value, the photographed image displays for 2 seconds. You can turn it off or set it for 10 seconds.

1 In the [RECV] (Rec.) menu, select [Review].

- See Selecting Menus and Settings (p. 35).


2 Select a Review setting and press the Menu button.

- With the [Off] option, the image will not automatically display. However, you can view it if you keep the shutter button held down.
- With the [2 sec.] or [10 sec.] options, the image automatically displays for the set duration even if the shutter button is released.
- You can display the image longer than the 2- or 10-second duration by keeping the shutter button depressed or by pressing the Set button while it is displayed.
- Another picture can be taken even while the last is displayed.

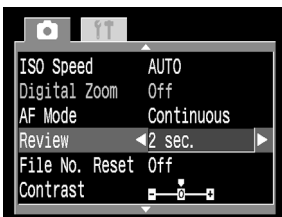



Adjusting the Zoom (Focal Length)

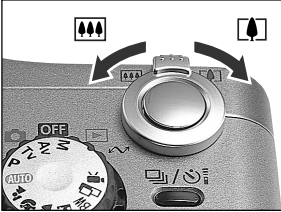Focal length can be adjusted from 7 to 21 mm (equivalent to 34 to 102 mm in 35 mm film format).



Telephoto / Wide Angle

- Press the zoom lever toward  to zoom in (telephoto).
- Press the zoom lever toward  to zoom out (wide angle).



Digital Zoom

- An image already zoomed with the optical zoom lens can be further zoomed digitally by 2 or 4 times (p. 53) and shot.




- The digital zoom combines the optical zoom with a digital teleconverter function. The resolution is coarser than with pure optical magnification.

⚡ Using the Built-In Flash

Use the built-in flash according to the guidelines below.

⚡ ^A (Auto)*	The flash fires automatically as required by the lighting level.
👁️ (Red-eye reduction, Auto)	The red-eye reduction lamp always fires but the flash only fires as required by the lighting level.
⚡👁️ (Red-eye reduction, Flash on)	The red-eye reduction lamp and the flash always fire.
⚡ (Flash on)	The flash always fires.
🚫⚡ (Flash off)	The flash does not fire.

* No icon appears in the display panel in Auto mode.

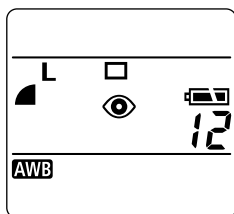

1 Press the ⚡ button to switch between flash modes.

- The selected flash mode will show in the display panel. It will also appear on the LCD monitor if it is on.

2 Shoot the image.

- The flash will fire if the indicator beside the viewfinder shines orange when the shutter button is pressed halfway.
- Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).

Built-in Flash Settings

The flash cannot be used with some shooting modes.

	AUTO	👤	👤	👤	👤	BW	📷	🗣️	P	Tv	Av	M
⚡ ^A (Auto)	●	●*	●	●	●	●*	–	–	–	–	–	–
👁️ (Red-eye reduction, Auto)	●*	●	●*	●	●*	●	–	–	–	–	–	–
⚡👁️ (Red-eye reduction, Flash on)	–	●	●	●	●	●	–	–	●	●	●	●
⚡ (Flash on)	–	●	●	●	●	●	▲	–	●	●	●	●
🚫⚡ (Flash off)	●	●	●	●*	●	●	▲*	●*	●*	●*	●*	●*

* Default setting.

● Setting selection is possible.

▲ Setting can only be selected for the first image.

– Setting selection is not possible.



- The fastest shutter speed for flash synchronization is 1/250 second. The camera automatically resets the shutter speed to 1/250 second if a faster speed is selected.
- The flash may take up to approximately 10 seconds to charge in some cases. Actual times will vary according to usage and the battery charge.
- The flash setting is saved when the camera is turned off in the **P**, **Tv**, **Av** and **M** shooting modes.
- The flash will fire twice. A pre-flash will fire just before the shutter closes and will be followed by the main flash. The pre-flash is used by the camera to obtain the subject's exposure data so that the main flash can be set to the optimal intensity for the shot.




About the Red-Eye Reduction Function

A subject's eyes can appear red in an image shot with a flash in dim lighting due to light reflecting back from the eye's blood vessels, which is known as the red-eye phenomenon. The red-eye reduction lamp fires a soft pre-flash that causes the pupils to contract, thereby lessening the chances of the eyes appearing red when the main flash fires.

- Tell human subjects to look at the lamp since the function will not have any effect if the subject is not looking at the red-eye reduction lamp.
- The effect is made stronger by increasing the room lighting or by approaching closer to the subject.

Pan Focus Mode

This mode fixes the focus so that shot can be taken quickly when the shutter button is pressed. Use this mode when you do not want to miss a shot, but you cannot predetermine the subject's position or focal distance. The focal length is preset to the maximum wide angle setting.

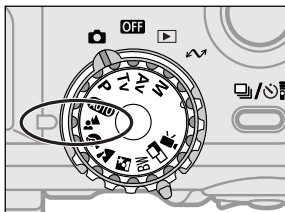

1 Turn the mode dial to .

- Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).




- The zoom, macro, AE lock, FE Lock, metering method, manual focus, focus, file format (RAW), and image adjustment (ISO speed, contrast, sharpness and saturation) settings cannot be adjusted in this mode.



- Shots can be taken within the range of 65 cm (25.6 in.) at maximum wide angle to infinity in this mode.

Portrait Mode

Use this mode when you want the subject to appear sharp and the background to fade.

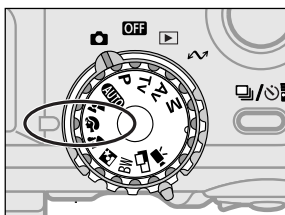

1 Turn the mode dial to .

- Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).




- The AE lock, FE Lock, metering method, file format (RAW), and image adjustment (ISO speed, contrast, sharpness and saturation) settings cannot be adjusted in this mode.



- To best achieve the effect of the background gradually fading, compose the image so that the upper half of the subject's body fills most of the viewfinder or LCD monitor.
- The background gets increasingly indistinct the more you adjust the focal length toward telephoto.

Landscape Mode

Use this mode to shoot expansive landscape scenes.

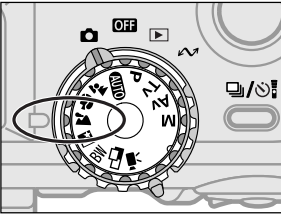



1 Turn the mode dial to .

- Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).




- The macro, AE lock, FE Lock, metering method, file format (RAW), and image adjustment (ISO speed, contrast, sharpness and saturation) settings cannot be adjusted in this mode.



- Since a slow shutter speed is often selected in  mode, use a tripod to shoot if the  (camera shake warning) icon appears in the LCD monitor.

Night Scene Mode

Use this mode to capture human subjects against the backdrop of an evening sky or night scene. The people are illuminated with light from the flash while the backdrop is captured at a slow shutter speed so that both appear correctly exposed.

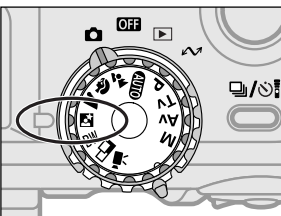



1 Turn the mode dial to .

- Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).





- The macro, AE lock, FE Lock, metering method, file format (RAW), and image adjustment (ISO speed, contrast, sharpness and saturation) settings cannot be adjusted in this mode.
- Always use a tripod to prevent camera shake in this mode.



- Warn people to stay still for a few seconds after the flash fires because of the slow shutter speed.
- Optional EX series Speedlites (p. 108) can also be used to shoot in  mode.
- Using the  mode in daylight will produce an effect similar to that of the **AUTO** mode.

Stitch Assist Mode


Use this mode to shoot series of overlapping frames for merging into a large image on the computer.

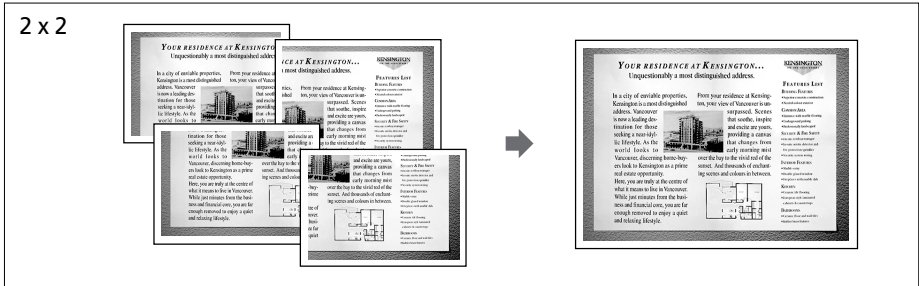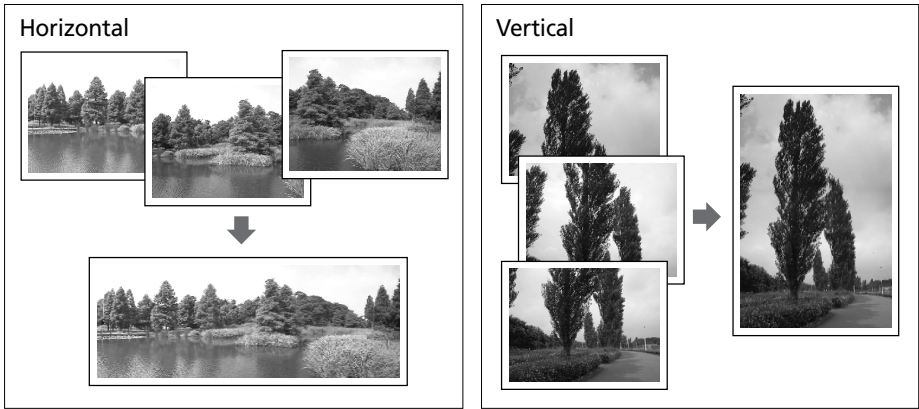

- Please use the bundled PhotoStitch program to merge the images on a computer.

Framing a Subject

PhotoStitch detects the overlapping portions of adjoining images and merges them. When composing shots, try to include a distinctive item (landmark, etc.) in the overlapping portions.

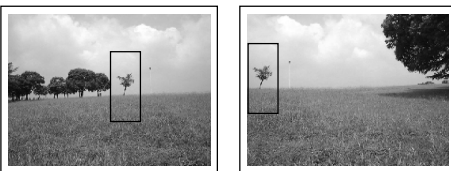




- Compose each frame so that it overlaps 30 to 50% of the adjoining image. Try to keep the vertical misalignment to within 10% of the image height.
- Do not include moving items in the overlap.
- Do not try to stitch images that include both distant and close items. Objects may appear warped or doubled up.




To Shoot a Distant Subject

As shown below, swivel the camera around its axis to take successive shots.

Horizontal:
swivel left to right
or vice versa

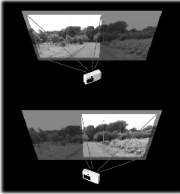


Vertical:
swivel up and down
or vice versa

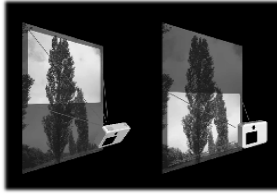

To Shoot a Close Subject


Slide the camera (move the camera parallel to the subject) to take successive shots.

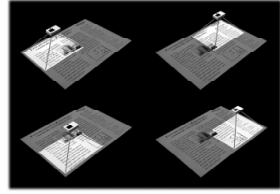

Shooting

Images can be shot in the following 5 sequences in Stitch Assist mode.

	Horizontally, left to right
	Horizontally, right to left
	Vertically, bottom to top
	Vertically, top to bottom
	Clockwise starting at the top left

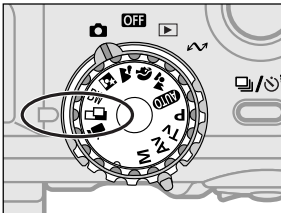

1 Turn the mode dial to and open the LCD monitor.

- The LCD monitor will turn on.




2 Select the shooting sequence with the or arrow of the omni selector and press the Set button.

- You can also press the shutter button directly to shoot without pressing the Set button.

3 Shoot the first image.


- The exposure and white balance settings are set and locked with the first image.

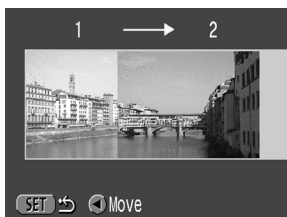

Sequence

4 Compose and shoot the second image so that it overlaps the first.

- Minor discrepancies in the overlap can be corrected with the software.
- An image can be retaken. Press the or arrow of the omni selector to return to that frame.

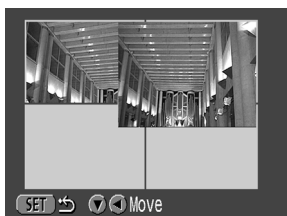

Sequence

5 Use the same procedures to shoot the remaining frames.

- A maximum of 26 images can be recorded either horizontally or vertically.

6 Press the Set button after the last shot.



- The digital zoom, flash (auto, red-eye reduction, auto / red-eye reduction, flash on), continuous mode, AEB mode, AE lock, FE Lock, metering method, file format (RAW), and image adjustment (ISO speed, contrast, sharpness and saturation) settings cannot be adjusted in this mode.
- A TV cannot be used as the monitor for shooting in this mode.




- The zoom, flash (on / off), resolution, exposure, white balance* and flash exposure compensation settings can only be adjusted for the first image. The selected settings are applied to the subsequent images and cannot be changed.

* A custom white balance setting cannot be set in mode. To use a custom white balance setting, first set it in another shooting mode.

Movie Mode

Use this mode to shoot movie frames. The resolution is automatically fixed at 320 x 240 pixels.

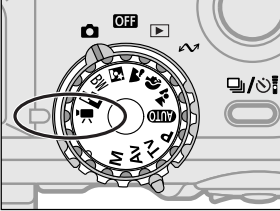

1 Turn the mode dial to **M** and open the LCD monitor.

- The LCD monitor will turn on.

2 Press the shutter button all the way.

- Shooting and sound recording will start simultaneously.
- During the shooting, the elapsed time will show in the display panel and a red circle will appear in the upper right of the LCD monitor.

3 Press the shutter button all the way to stop recording the movie.

- The maximum movie length is approximately 30 seconds (15 frames / second). Shooting automatically stops after 30 seconds, or when the internal memory or CF card becomes full.



- Be careful not to touch the microphone while shooting.
- The AE, AF and zoom settings are set and locked to the settings of the first frame.
- If the indicator flashes green after a shoot, this indicates that the movie is being written to the CF card. You cannot shoot until it stops flashing.
- The digital zoom, flash, continuous mode, AEB mode, flash exposure compensation, AE lock, FE Lock, metering method, AF mode (single), resolution, compression, file format (RAW), and image adjustment (ISO speed, contrast, sharpness and saturation) settings cannot be adjusted in this mode.




- Sound is recorded monaurally.
- There is no shutter sound in movie mode.





- QuickTime 3.0 or higher is required to replay movie files (AVI / Motion JPEG) on a computer.

Macro Mode

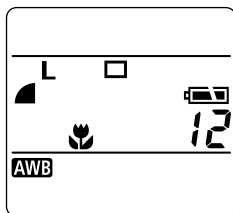Use the macro mode to shoot close-ups of subjects in the range of 6 to 70 cm (2.4 in. to 2.3 ft.) at maximum wide angle and 20 to 70 cm (7.9 in. to 2.3 ft.) at maximum telephoto.






1 Press the button.

- The  icon will show in the display panel. It will also show in the LCD monitor when it is on.
- Press the  button again to cancel the macro mode.

2 Shoot the image.

- The indicator beside the viewfinder will shine yellow when the shutter button is pressed halfway.
- Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).




- The macro mode cannot be selected in the ,  and  shooting modes.
- Use of the built-in flash may not provide an appropriate amount of light.







- Always use the LCD monitor to compose images in macro mode. The parallax phenomenon may cause images composed with the optical viewfinder to be off-center.
- Turning the camera off cancels the setting.

Self-Timer

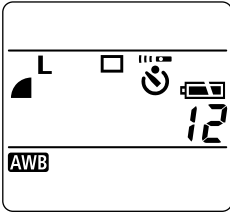
You can take pictures with the self-timer in any shooting mode.



1 Press the button.

- Press the  button several times to display the  icon in the display panel. The icon will also appear in the LCD monitor if it is on.
- You can cancel the self-timer by pressing the  button until the  icon disappears.

2 Shoot the image.


- When the shutter button is pressed all the way, the self-timer lamp flashes and activates the shutter approximately 10 seconds later. The flashing gets faster 2 seconds before the shutter activates.
- Shooting procedures are the same as for the  Auto mode (p. 37).








- Turning the camera off cancels the setting.

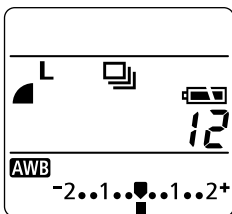

Continuous Mode

Use this mode to shoot successive frames while the shutter button is pressed.



- 1 Press the  button.**
 - Press the  button several times to display the  icon in the display panel. The icon will also appear in the LCD monitor if it is on.
 - You can cancel the continuous mode by pressing the  button until the  icon disappears.
- 2 Press the shutter button halfway to lock the focus.**
- 3 Press the shutter button all the way to shoot.**
 - While the shutter button is pressed all the way, shots are taken at approximately 1.7 images per second* when the image quality is set to Large / Fine and the LCD monitor is off. Release the shutter button to stop shooting.
 - * This figure reflects standard shooting conditions established by Canon. Actual figures may vary according to the subject and shooting conditions.




- This mode cannot be selected in the **AUTO**,  or  shooting mode.
- An externally mounted flash will not fire in this mode.
- The built-in flash can be used, but the interval between images will lengthen to accommodate the flash recharge time.



- Successive frames can be shot until the CF card is filled.
- The interval between frames may lengthen somewhat when the internal memory gets full.
- Turning the camera off cancels the setting.

Digital Zoom

Images can be digitally zoomed by a factor of 2 or 4 with the digital teleconverter function.

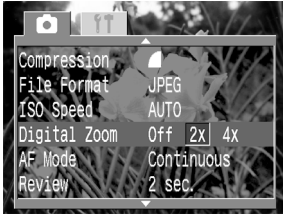

Zoom Setting

- 1** Press the Display button to turn the LCD monitor on.
- 2** Turn the mode dial to any shooting mode except for or .
- 3** In the [(Rec.)] menu, select [Digital Zoom].
 - See Selecting Menus and Settings (p. 35).
- 4** Select [2x] or [4x] and press the Menu button.
 - The LCD monitor changes to the selected zoom setting.
- 5** Shoot the image.
 - Shooting procedures are the same as for the **AUTO** Auto mode (p. 37).



- This mode cannot be selected in the and shooting modes or for the RAW file format.
- The digital zoom combines the image captured by the optical zoom lens with a digital teleconverter function. The more the image is zoomed, the coarser it becomes.








- Hold the Set button and press the zoom lever once toward the side to set the factor to 2x and press it once more to set it to 4x.
- When the factor is set to 4x, hold the Set button and press the zoom lever once toward the side to switch to 2x and once more to turn the digital zoom off.


Shooting - Selecting Particular Effects

Changing the Resolution and Compression


Images can be shot at the following resolution and compression settings.

Resolution		Compression	
L (Large)	2048 x 1536 pixels		Superfine
M (Medium)	1024 x 768 pixels		Fine
S (Small)	640 x 480 pixels		Normal

- 1 Turn the mode dial to a shooting mode other than .
- 2 In the [ (Rec.)] menu, select [Resolution] or [Compression].
 - See Selecting Menus and Settings (p. 35).
- 3 Select a resolution or compression setting and press the Menu button.
 - The selected resolution and compression settings will show in the display panel.

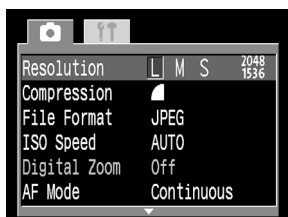

Resolution

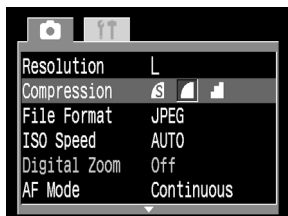

Compression

- 4 Shoot the image.

Approximate File Size for One Image

Resolution	Compression		
L (2048 x 1536)	1722 KB	943 KB	468 KB
M (1024 x 768)	591 KB	329 KB	174 KB
S (640 x 480)	273 KB	156 KB	88 KB
RAW (2048 x 1536)	2469 KB		

- This figure reflects standard shooting conditions established by Canon. Actual figures may vary according to the subject and shooting conditions.
- Please see the list of CF cards and their approximate capacities (p. 26).



- The settings cannot be adjusted in mode. In mode, the resolution setting can only be adjusted for the first image.



- The resolution and compression settings are affected by the shooting mode selection according to the following.

Initial Shooting Mode	Next Shooting Mode	Resolution and Compression after Change
AUTO	BW	Settings change to those of the next mode
	P Tv Av M	
	BW	Settings do not change
BW	AUTO P Tv Av M	Settings change to those of the next mode
P Tv Av M	P Tv Av M	Settings do not change
	AUTO BW	Settings change to those of the next mode

- The resolution and compression settings are saved when the camera is turned off.


Changing the File Format

The recording file format can be switched to the RAW format. With the standard JPEG file format, the camera processes images after capturing them to produce optimal results. This format compresses images so that more can be stored on a single CF card. However, the compression is irreversible, meaning that the original image data cannot be recovered after processing. In contrast, the RAW format records the image data as captured by the camera's CCD without further processing. RAW images are compressed, but the compression is reversible* so that a high-quality image can be obtained from the decompressed file without any loss of image quality. In addition, although a RAW file is larger than an equivalent JPEG file, it is still only approximately one-quarter the size** of an uncompressed RGB TIFF format file, making it relatively compact.


With standard uncompressed file formats, such as RGB TIFF, images are processed in the camera and require further processing by retouching software to adjust the image parameters, which reduces image quality. With the RAW format, however, the original data can be used in special software* to adjust the image parameters (white balance, contrast, sharpness and saturation) making it possible to maintain the image quality while making changes. The resolution (2048 x 1536) and compression settings cannot be adjusted for these images.

* The bundled software is required to restore RAW format data or adjust its parameters. Please consult the separate *Software Starter Guide* for details.

** As measured by standard Canon test conditions.

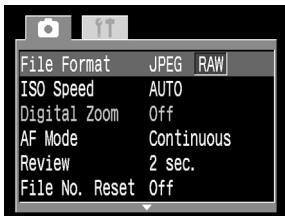


- 1 Turn the mode dial to **P**, **Tv**, **Av** or **M**.
- 2 In the [(Rec.)] menu, select [File Format].
 - See Selecting Menus and Settings (p. 35).
- 3 Select [RAW] and press the Menu button.
 - The **RAW** icon will show in the display panel.
- 4 Shoot the image.

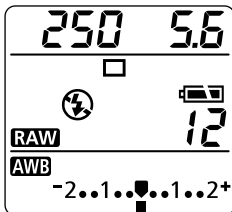


• This format cannot be selected for the **AUTO**, , , , , **BW**, or mode.

P Program AE

Use the program AE mode to have the camera automatically set the shutter speed and aperture settings to match the brightness of the scene.

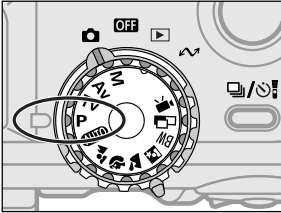

1 Turn the mode dial to **P**.

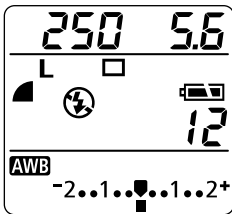

2 Press the shutter button halfway to set the focus.

- The shutter speed and aperture settings will be set automatically and shown in the display panel. They will also appear in the LCD monitor if it is on.
- The correct exposure has been set if the shutter speed and aperture settings do not blink in the display panel.

3 Press the shutter button all the way to shoot the image.



- If an incorrect exposure will result, the shutter speed and aperture settings blink in the display panel and show in red in the LCD monitor. Use the following methods to shoot.
 - Use the flash.
 - Adjust the exposure using spot metering, exposure compensation or flash exposure compensation.
 - Switch the shooting mode to **M** (Manual).




Differences and Similarities between the P and **AUTO** Modes.

- Both modes automatically select the shutter speed and aperture settings.
- The following settings can be adjusted in **P** mode, but not in **AUTO** mode.
 - Exposure Compensation
 - AEB Mode
 - Built-In Flash (Red-Eye Reduction, Flash On)
 - Continuous Mode
 - Image Adjustment (ISO Speed, Contrast, Sharpness and Saturation) Settings
 - Metering Method
 - AE Lock
 - White Balance
 - Flash Exposure Compensation
 - File Format Settings
 - Manual Focus
 - FE Lock


Tv Setting the Shutter Speed

When you set the shutter speed in the shutter speed-priority AE mode, the camera automatically selects an aperture setting to match the brightness. Faster shutter speeds allow you to catch an instantaneous image of a moving subject while slower speeds create a flowing effect.

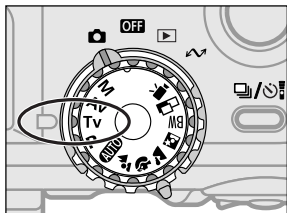


1 Turn the mode dial to Tv.

- The shutter speed will show in the display panel. It will also appear on the LCD monitor if it is on.

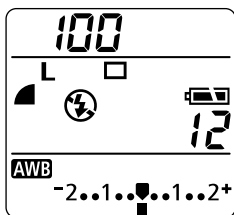

2 Press the or arrow on the omni selector to select a speed.

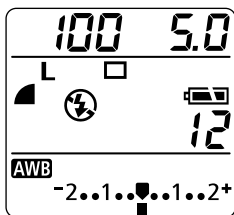



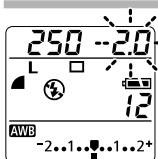
3 Press the shutter button halfway to set the focus.

- The correct exposure has been set if the shutter speed and aperture settings do not blink in the display panel.

4 Press the shutter button all the way to shoot the image.



- If an incorrect exposure will result, the aperture setting will blink in the display panel and show in red in the LCD monitor. Press the  or  arrow on the omni selector to change the speed.



- If the aperture value is flashing or shown in red, the image is under- or overexposed (insufficient light). Adjust the shutter speed using the or arrow on the omni selector until the flashing stops or the aperture value display turns to white.

- The nature of CCD image sensors is such that noise in the recorded image increases at slow shutter speeds. This camera, however, applies special processing to images shot at shutter speeds slower than 1.3 seconds to eliminate the noise, thereby producing high-quality images. Nevertheless, a certain amount of processing time may be required before the next image can be shot.
- At shutter speeds between 1/640 and 1/1000 second, the aperture presets to F8.0.



Shutter Speed Display

The shutter speeds from 1000 to 4 in the display are actually the denominator of a fraction of a second. For example, 160 indicates a speed of 1/160 second. For slower speeds, quote marks indicate the decimal place, so that 0"3 indicates 0.3 second and 2" indicates 2 seconds.


1000	800	640	500	400	320	250	200	160	125	100			
80	60	50	40	30	25	20	15	13	10	8	6	5	4
0"3	0"4	0"5	0"6	0"8	1"	1"3	1"6	2"	2"5	3"2	4"		
5"	6"	8"											

The display of shutter speeds from 1/4 to 1/1000 second differs between the display panel and LCD monitor.


Shutter Speed	1/1000 sec.	...	1/4 sec.	...	0.8 sec.	...	8 sec.
Display Panel	1000	...	4	...	0"8	...	8"
LCD Monitor	1/1000	...	1/4	...	0"8	...	8"



Av Setting the Aperture

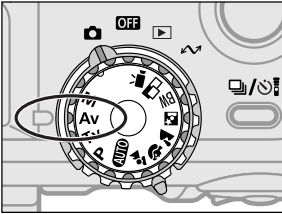
When you set the aperture in the aperture-priority AE mode, the camera automatically selects a shutter speed to match the brightness. Selecting a lower aperture value (opening the aperture) allows you to fade the background and create a beautiful portrait. A higher aperture value (closing it) brings the entire range from foreground to background into focus. The larger the aperture value, the greater the range of the image brought into clear focus.

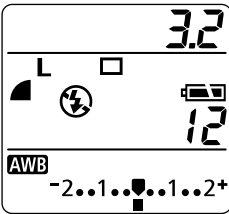

- 1 Turn the mode dial to Av.**
 - The aperture setting will show in the display panel. It will also appear on the LCD monitor if it is on.



- 2 Press the  or  arrow on the omni selector to select a value.**

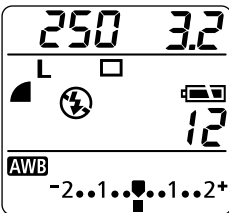



- 3 Press the shutter button halfway to set the focus.**
 - The correct exposure has been set if the shutter speed and aperture settings do not blink in the display panel.


- 4 Press the shutter button all the way to shoot the image.**





- F2.0 and F2.2 cannot be selected when the focal length has been set to the maximum telephoto setting with the zoom lever.
- When an aperture between F2.0 and F7.1 is selected, the fastest shutter speed is 1/500 second. If an aperture of F8.0 is selected, the fastest shutter speed is 1/1000 second.

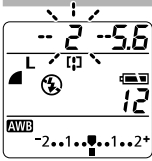

- If an incorrect exposure will result, the shutter speed will blink in the display panel and show in red in the LCD monitor. Press the  or  arrow on the omni selector to change the aperture value.



- If the shutter speed is flashing or shown in red, the image is under- or overexposed (insufficient light). Adjust the aperture value using the  or  arrow on the omni selector until the flashing stops or the shutter speed display turns to white.



Aperture Setting Display

The larger the aperture value, the smaller the lens aperture.



F2.0 F2.2 F2.5 F2.8 F3.2 F3.5 F4.0 F4.5 F5.0 F5.6
 F6.3 F7.1 F8.0





The display of aperture settings differs between the display panel and LCD monitor.

Aperture Value	F2.0 . . . F8.0
Display Panel	2.0 . . . 8.0
LCD Monitor	F2.0 . . . F8.0

M Manually Setting the Shutter Speed and Aperture

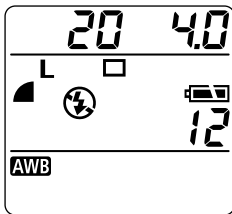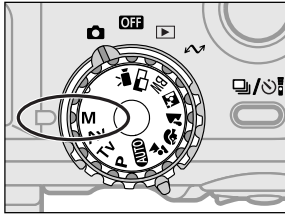You can manually set the shutter speed and aperture to achieve a particular effect. This is convenient for shooting fireworks and other images for which it is difficult to set the correct exposure automatically. In addition, the shooting time is shorter in comparison with the other modes because the AE function is not operating.




- 1** Turn the mode dial to **M**.
 - The shutter speed and aperture setting will show in the display panel. They will also appear on the LCD monitor if it is on.
- 2** Press the  or  arrow on the omni selector to select a shutter speed.
- 3** Press the  or  arrow on the omni selector to select an aperture setting.
- 4** Press the shutter button halfway to set the focus.
- 5** Press the shutter button all the way to shoot the image.







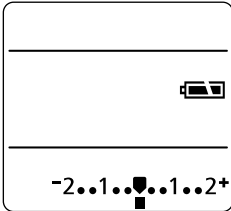

- The exposure compensation, flash exposure compensation and AEB mode settings cannot be adjusted in this mode.
- Shutter speeds between 1/640 and 1/1000 second can be selected when the aperture is set to F8.0.

Adjusting the Exposure Compensation

Adjust the exposure compensation setting to avoid making the subject too dark when it is backlit or shot against a bright background.



- 1** Press the /WB// button once.
 - The exposure compensation bar will appear in the display panel. The bar will also appear in the LCD monitor if it is on.
- 2** Press the  or  arrow on the omni selector to select a setting.
 - The settings can be adjusted in 1/3 steps in the range of -2EV to +2EV.
- 3** Press the Set button.
 - You can also take the picture with the set exposure compensation value by pressing the shutter button without pressing the Set button.
 - To cancel the exposure compensation, return the setting to .
- 4** Shoot the image.
 - If you pressed the shutter button at Step 3, the exposure compensation bar will reappear after the shot, allowing you to change the setting for the next shot.










- This setting cannot be adjusted in the **AUTO** and **M** shooting modes. In  mode, it can only be adjusted for the first image.










- The selected shooting mode will determine whether or not the exposure compensation setting is cancelled when the camera is turned off (p. 79).

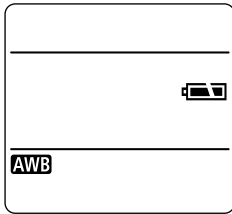WB Setting the White Balance


When the white balance mode is set to match the light source, the camera can reproduce colors more accurately. Set the white balance mode to a natural or artificial light setting according to the circumstances.

 (Auto)	Settings are automatically set by the camera
 (Daylight)	For recording outdoors on a bright day
 (Cloudy)	For recording under overcast, shady or twilight skies
 (Tungsten)	For recording under tungsten lighting
 (Fluorescent)	For recording under fluorescent lighting
 (Flash)	For flash photography
 (Custom)	For setting a custom value with a white sheet of paper, etc., to obtain the optimal white balance for the conditions



- 1 Press the /WB// button twice.**
 - The current white balance mode will appear in the display panel. The white balance settings menu will appear in the LCD monitor if it is on.
- 2 Press the  or  arrow on the omni selector to select a setting.**
 - Please see the next page regarding the  custom setting.
- 3 Press the Set button.**
 - You can also take the picture in the set white balance mode by pressing the shutter button without pressing the Set button.
- 4 Shoot the image.**
 - If you pressed the shutter button at Step 3, the current white balance mode will reappear after the shot, allowing you to change the setting for the next shot.




- This setting cannot be adjusted in the **AUTO** and **BW** shooting modes. In  mode, it can only be adjusted for the first image.





- The selected shooting mode will determine whether or not the white balance setting is cancelled when the camera is turned off (p. 79).

Setting a Custom White Balance


You can set a custom white balance to obtain the optimal setting for the shooting conditions by having the camera evaluate a subject such as a white piece of paper or white cloth.

- 1** Press the /WB// button twice.
 - The current white balance mode will appear in the display panel. The WB settings menu will appear in the LCD monitor if it is on.

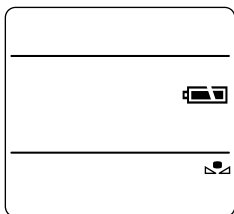

- 2** Press the  or  arrow on the omni selector to select .





- 3** Aim the camera at the white paper or cloth and press the  button.
 - Aim the camera so that the white sheet or cloth completely fills the frame on the LCD monitor screen or the entire viewfinder before pressing the  button.

- 4** Press the Set button.
 - You can also take the picture with the white balance set to the selected value by pressing the shutter button without pressing the Set button.


- 5** Shoot the image.
 - If you pressed the shutter button at Step 4, the white balance mode will reappear after the shot, allowing you to change the setting for the next shot.




- To set and use a custom white balance setting, it is advisable to select the **P** shooting mode and set the exposure compensation and flash exposure compensation to zero (± 0). The correct white balance may not be obtained when the exposure is incorrect (image is completely black or white).
- It is also desirable to use the LCD monitor to compose the shot and to zoom in to the maximum telephoto setting.
- Since a custom white balance setting cannot be set in  mode, pre-set the white balance in another shooting mode first before selecting the  mode.
- If the flash fires when setting a custom white balance with the flash set to auto or red-eye-reduction auto, use the flash when you go to shoot too. The correct white balance cannot be obtained unless the flash is used consistently. To ensure consistency, set the flash to on or off as appropriate.
- The selected shooting mode will determine whether or not the custom white balance setting is cancelled when the camera is turned off (p. 79).

Auto Exposure Bracketing (AEB Mode)

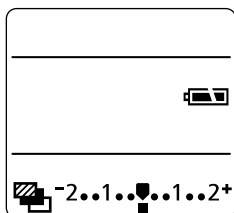

In this mode, the camera automatically changes the exposure within a set range to take three shots after you press the shutter button once. You can adjust AEB settings in 1/3EV steps within the range of -2EV to +2EV of the standard exposure setting. AEB settings can be combined with exposure compensation settings to extend the adjustment range.




1 Press the /WB// button three times.

- The  icon and the exposure compensation bar will appear in the display panel. The exposure compensation bar will also appear in the LCD monitor if it is on.


2 Press the or arrow on the omni selector to expand or contract the range.

- The  arrow expands the range, the  arrow contracts it.







3 Press the Set button.

- You can also take the picture with the set exposure compensation value by pressing the shutter button without pressing the Set button.
- To cancel the AEB setting, reset it to .

4 Shoot the image.

- If you pressed the shutter button at Step 3, the  icon and the exposure compensation bar will reappear after the shot, allowing you to change the setting for the next shot.




- This setting cannot be adjusted in the **AUTO**, , , , **BW**, ,  and **M** shooting modes.
- When exposure compensation is set to , the AEB exposure sequence is 0, -, and + according to the camera's exposure meter.
- The AEB mode cannot be used for flash photography. If the flash fires, only one image gets recorded.









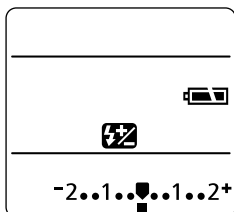

- The selected shooting mode will determine whether or not the AEB setting is cancelled when the camera is turned off (p. 79).

Adjusting the Flash Output (Flash Exposure Compensation)

You can adjust the flash output for flash photography.



- 1** Press the /WB// button four times.
 - The  icon and the flash exposure compensation bar will appear in the display panel. The flash exposure compensation bar will also appear in the LCD monitor if it is on.
- 2** Press the  or  arrow on the omni selector to expand or contract the range.
 - The flash exposure compensation can be adjusted in 1/3 steps within a range of -2EV to +2EV.
- 3** Press the Set button.
 - You can also take the picture with the set flash exposure compensation value by pressing the shutter button without pressing the Set button.
 - To cancel the setting, reset it to .
- 4** Shoot the image.
 - If you pressed the shutter button at Step 3, the  icon and the flash exposure compensation bar will reappear after the shot, allowing you to change the setting for the next shot.



- This setting cannot be adjusted in the **AUTO**,  and **M** shooting modes. In  mode, it can only be adjusted for the first image.



- The selected shooting mode will determine whether or not the flash exposure compensation setting is cancelled when the camera is turned off (p. 79).
- The flash exposure compensation mode only functions with the built-in flash or an externally mounted EX series Speedlite (p. 108).

* Locking the Exposure Setting (AE Lock)


You can set the exposure and focus separately. This is effective when the contrast is too strong between the subject and background or when a subject is backlit.

1 Press the Display button to turn on the LCD monitor.

2 Center the subject on which you want to lock the exposure setting in the LCD monitor and press the shutter button halfway to set the focus.

3 Press the * button.


- The exposure setting will lock (AE Lock) and the * icon will appear in the display panel and LCD monitor.
- Pressing any button other than the shutter button cancels the AE lock.

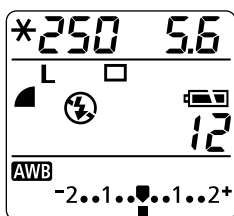

AE Lock Icon

4 Recompose the image and press the shutter button halfway to set the focus.

5 Press the shutter button all the way to shoot the image.

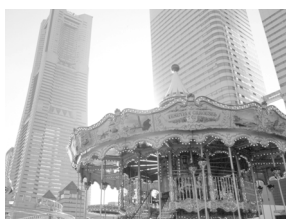


- This setting cannot be adjusted in the **AUTO**, , , , , **BW**, , and **M** shooting modes.
- AE lock cannot be set when the built-in or the externally mounted flash is used. Flash Exposure Lock (FE Lock) is available in these situations (p. 70).

* Locking the Flash Exposure Setting (FE Lock)

You can lock the flash exposure so that the exposure settings are correctly set for a particular portion of your subject.

- 1** Press the Display button to turn on the LCD monitor.
- 2** Set the built-in flash to fire.
 - If you are using an externally mounted flash, please refer to its manual for setting instructions.
- 3** Center the subject on which you want to lock the flash exposure setting in the LCD monitor and press the shutter button halfway to set the focus.
- 4** Press the * button.
 - The flash exposure compensation setting will lock (FE lock) and the * icon will appear in the LCD monitor and display panel.
 - The flash will fire a pre-flash and lock the flash exposure to the required intensity to illuminate the subject. (Each time you press the * button, the flash exposure locks at the required intensity for that composition).
 - Pressing any button other than the shutter button cancels the FE lock.

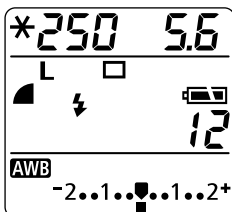

5 Recompose the image and press the shutter button halfway again to reset the focus.






- Confirm that the indicator beside the viewfinder shines orange.



6 Press the shutter button all the way to shoot the image.

- As the example to the left shows, a backlit subject can be shot at the correct exposure if the FE lock is set when the camera is aimed at a non-backlit portion of the subject.



- This setting cannot be adjusted in the **AUTO**, , , , , **BW**, ,  and **M** shooting modes.



- The FE Lock only functions with the built-in flash or a Canon EX-series Speedlite (p. 108).






Switching between Metering Modes

Center-weighted averaging is the default metering mode. This can be switched to spot metering.








Center-Weighted Averaging	The average value from the entire image area is combined with the value measured at the center of the viewfinder or LCD monitor.
Spot	The area within the frame at the center of the LCD monitor is metered. This is useful when the subject's surroundings are bright, such as when it is backlit.



Metering Frame

- 1** Press the Display button to turn on the LCD monitor.
- 2** Press the  button.
 - The  icon and the metering frame will appear in the LCD monitor.
 - Pressing the  button again switches back to the center-weighting averaging mode.
- 3** Press the shutter button halfway to set the focus.
- 4** Press the shutter button all the way to shoot the image.



- This setting cannot be adjusted in the **AUTO**, , , , , , **BW**,  and  shooting modes.



- You are recommended to use the LCD monitor to compose images in spot metering mode. You may misalign the metering spot with the subject using the viewfinder.

Shooting Problem Subjects for the Autofocus

The autofocus may not work well on the following types of subject.

- Subjects with extremely low contrast to the surroundings
- Subjects mixing close and far objects
- Subjects with extremely bright objects at the center of the composition
- Subjects that are moving quickly

To shoot these subjects, first aim the camera at an object at a similar distance, lock the focus and recompose the image with the desired subject, or use the manual focus.



- When shooting through glass, approach as close as possible to avoid reflections off the glass.

Shooting with Focus Lock

Focus Lock Method 1

- 1** Aim the center of the viewfinder at an object at a similar distance to the subject you wish to shoot.
- 2** Press the shutter button halfway to lock the focus.
 - The AE setting will also lock when you do this. The exposure may occasionally be incorrect if the difference between the two items is too great. Use method 2 or the AE lock procedure when this happens.
- 3** Keep it pressed while you recompose and press the shutter button all the way to shoot the image.

Focus Lock Method 2

- 1** Press the Display button to turn on the LCD monitor.
- 2** Aim the center of the LCD monitor at an object at a similar distance.
- 3** Press the shutter button halfway to lock the focus. Keep it pressed and press the MF button.
 - The **MF** icon will appear in the display panel and the **MF** icon in the LCD monitor.
 - The focus setting will lock even if the shutter button and MF button are released.
 - The manual focus setting will cancel if the MF button is pressed again.



4 Recompose the image and press the shutter button all the way to shoot the image.



- Method 2 is convenient because you can let go of the shutter button to recompose the image.


Shooting in Manual Focus Mode



The focus can be manually set.

- 1 Press the Display button to turn the LCD monitor on.
- 2 Press and hold the MF button and press the  or  arrow on the omni selector.

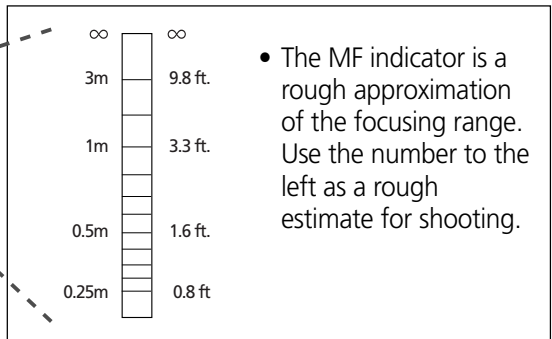

MF Indicator



- The focus will lock and the **MF** icon will show in the display panel. The **MF** icon and the MF indicator will appear in the LCD monitor.
- Adjust the focus with the  or  arrow on the omni selector until the image appears focused in the LCD monitor.
- Pressing the MF button a second time cancels the manual focus mode.

- 3** Press the shutter button halfway.
 - The indicator beside the viewfinder will shine yellow.
- 4** Press the shutter button all the way to shoot the image.



- This setting cannot be adjusted in the **AUTO** and  shooting modes.





- You can use the manual focus in the macro focal range (6 to 70 cm (2.4 in. to 2.3 ft.) at maximum wide angle and 20 to 70 cm (7.9 in. to 2.3 ft.) at maximum telephoto).
- You can magnify an image afterward to check that it was shot in focus (p. 81).

Switching between Focus Settings


You can switch between focus settings to shoot.

Continuous	The camera is continually focusing on whatever it is aimed even when the shutter button is not pressed, allowing you to shoot without missing opportunities.
Single	The camera only focuses when the shutter button is pressed halfway, conserving battery power.

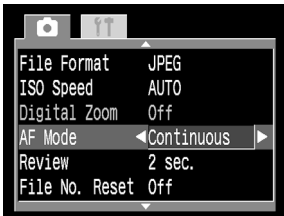

- 1** In the [ (Rec.)] menu, select [AF Mode].
 - See Selecting Menus and Settings (p. 35).
- 2** Select [Continuous] or [Single] and press the Menu button.
- 3** Shoot the image.



- These settings cannot be adjusted in the  shooting mode.
- When the LCD monitor is off and you are focusing through the viewfinder, the setting locks in the Single mode.




- The setting is not cancelled when the camera is turned off.

Manually Setting Image Characteristics

The ISO speed, contrast, sharpness and saturation settings can be adjusted for shooting.

- 1 In the [📷 (Rec.)] menu, select one of the above items.
 - See Selecting Menus and Settings (p. 35).
- 2 Select a value for the item and press the Menu button.

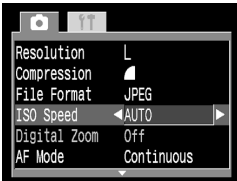

ISO speed

- Switch speeds when you are shooting in dark areas or want to use a fast shutter speed.
- You can select from 50, 100, 200, 400 and AUTO.
- The default setting is ISO 50.
- When AUTO is selected, the camera automatically adjust ISO between 50 and 100 only.
- Higher ISO speeds increase the image noise. To take clean images, use as low an ISO speed as possible.

Contrast




- Select from - (Weak), 0 (Neutral) and + (Strong).

Sharpness

- Select from - (Weak), 0 (Neutral) and + (Strong).

Saturation

- Select from - (Weak), 0 (Neutral) and + (Strong).

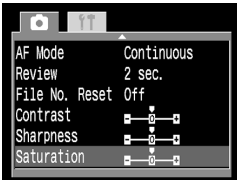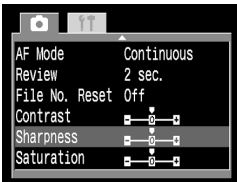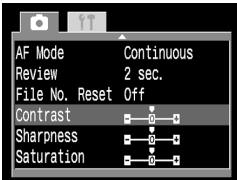

- 3 Shoot the image.



- These settings cannot be adjusted in the **AUTO**, **📷**, **📷**, **📷**, **📷**, **BW**, **📷** and **📷** shooting modes. In the **M** mode, the [ISO speed] cannot be set to [AUTO].




- The setting is not cancelled when the camera is turned off.

Resetting the File Number

You can select the way file numbers are assigned.

On	File number is reset to the start (100-0001) each time a new CF card is inserted. New images recorded on CF cards with existing files are assigned the next available number.
Off	The file number of the last image to be shot is memorized so that images recorded to a new CF card start from the next number.

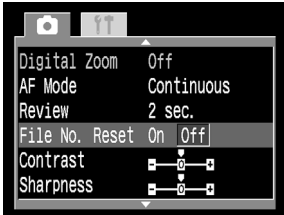

- 1** In the [(Rec.)] menu, select [File No. Reset].
 - See Selecting Menus and Settings (p. 35).
- 2** Select [On] or [Off] and press the Menu button.




- Setting the [File No. Reset] to [Off] is useful for avoiding file name duplication when images are downloaded to a computer.



About File Numbers

- Images are assigned file numbers from 0001 to 9900 and organized in folders usually containing up to 100 images. Folders are assigned numbers from 100 to 998.

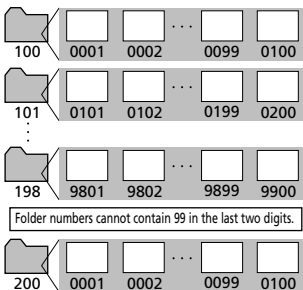

Since images shot in continuous mode or Stitch Assist mode are always saved in the same folder, some folders may contain 101 or more images.

Functions Available in Each Shooting Mode

This chart shows the functions available in each shooting mode.

																						Reference Page		
Flash	Auto (No Icon)	●	●*	●	●	●	●*	—	—	—	—	—	—	—	—	—	—	—	—	—	—	p. 41		
	Red-Eye Reduction, Auto	●*	●	●*	●	●*	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—		—	
	Red-Eye Reduction, Flash On	—	●	●	●	●	●	—	—	●	●	●	●	●	●	●	●	●	●	●	●		●	—
	On	—	●	●	●	●	●	▲	—	●	●	●	●	●	●	●	●	●	●	●	●		●	—
Off	●	●	●	●*	●	●	▲*	—	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	—		
Macro Mode		●	—	●	—	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	p. 50	
Drive Mode	Single Shot	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	●*	—	
	Continuous	—	●	●	●	●	●	—	—	●	●	●	●	●	●	●	●	●	●	●	●	●	p. 52	
	Self-Timer	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	p. 51	
Exposure Compensation	—	●	●	●	●	●	▲	●	●	●	●	●	●	●	●	—	—	—	—	—	—	p. 63		
White Balance	—	●	●	●	●	●	—	▲	●	●	●	●	●	●	●	—	—	—	—	—	—	p. 64		
AEB Mode	—	—	—	—	—	—	—	—	●	●	●	●	●	●	—	—	—	—	—	—	—	p. 67		
Flash Exposure Compensation	—	●	●	●	●	●	▲	—	●	●	●	●	●	●	—	—	—	—	—	—	—	p. 68		
AE Lock / FE Lock	—	—	—	—	—	—	—	—	●	●	●	●	●	●	—	—	—	—	—	—	—	pp. 69, 70		
Metering Mode (Spot Metering)	—	—	—	—	—	—	—	—	●	●	●	●	●	●	—	—	—	—	—	—	—	p. 72		
Manual Focus	—	—	●	●	●	●	●	●	●	●	●	●	●	●	—	—	—	—	—	—	—	p. 74		
Resolution	Large L	●*	●*	●*	●*	●*	●*	●*	—	●*	●*	●*	●*	●*	—	—	—	—	—	—	—	p. 54		
	Medium M	●	●	●	●	●	●	▲	—	●	●	●	●	●	—	—	—	—	—	—	—		—	
	Small S	●	●	●	●	●	●	▲	—	●	●	●	●	●	—	—	—	—	—	—	—		—	
Compression	Superfine	●	●	●	●	●	●	●	—	●	●	●	●	●	—	—	—	—	—	—	—	p. 54		
	Fine	●*	●*	●*	●*	●*	●*	●*	—	●*	●*	●*	●*	●*	—	—	—	—	—	—	—		—	
	Normal	●	●	●	●	●	●	●	—	●	●	●	●	●	—	—	—	—	—	—	—		—	
File Format	JPEG	●	●	●	●	●	●	●	—	●*	●*	●*	●*	●*	—	—	—	—	—	—	—	p. 56		
	RAW RAW	—	—	—	—	—	—	—	—	●	●	●	●	●	—	—	—	—	—	—	—		—	
ISO Speed	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	p. 77		
Digital Zoom	2x	●	●	●	●	●	●	—	—	●	●	●	●	●	—	—	—	—	—	—	—	p. 53		
	4x	●	●	●	●	●	●	—	—	●	●	●	●	●	—	—	—	—	—	—	—		—	
Focus Settings	Continuous	●*	—	●*	●*	●*	●*	●*	●	●*	●*	●*	●*	●*	—	—	—	—	—	—	—	p. 76		
	Single	●	—	●	●	●	●	●	—	●	●	●	●	●	—	—	—	—	—	—	—		—	
Contrast	—	—	—	—	—	—	—	—	—	●	●	●	●	●	—	—	—	—	—	—	—	p. 77		
Sharpness	—	—	—	—	—	—	—	—	—	●	●	●	●	●	—	—	—	—	—	—	—			
Saturation	—	—	—	—	—	—	—	—	—	●	●	●	●	●	—	—	—	—	—	—	—		—	

* Default setting.

● Setting selection is possible.

▲ Setting can only be selected for the first image.

— Setting selection is not possible.

■ (Shaded Area) Setting remains in effect even when the power is turned off.


⁽¹⁾ The ISO speed is automatically set between the equivalent of 50 and 100.


⁽²⁾ [AUTO] cannot be selected.

Replaying



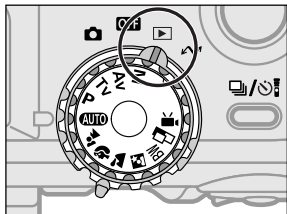

Viewing Images Singly (Single Image Replay)

You can view the recorded images in the LCD monitor.



- 1** Turn the main dial to .
 - The last recorded image will display (Single Image Replay).




- 2** Press the  or  arrow on the omni selector to move between images.
 - The  arrow moves to the previous image and the  arrow to the next. Holding the button down moves more rapidly between images, but the images will not appear as clearly.



- Press the Display button to show the data for the displayed image (p. 17).
- Press the * button to quickly delete the displayed image (p. 9).
- You can change the language displayed on the LCD monitor if you hold the Set button and press the Jump button (p. 105).

🔍 Magnifying Images





In single image replay, the displayed image can be shown magnified by an approximate factor of 2.5 or 5.

1 Turn the main dial to .




Magnified approximately 2.5 times
Approximate position


2 Press the  button.

- The display cycles to the next magnification mode (approximately 2.5 times, approximately 5 times, off) each time the button is pressed.
- Use the  /  /  /  arrows on the omni selector to move the magnified area around the image.



Magnified approximately 5 times
Approximate position

3 Press the  button.


- When the approximate magnification factor of 5 is selected, pressing the  button cancels the magnification mode.








- Movie frames cannot be magnified with this function.

Viewing Nine Images at a Time (Multi Replay)

Up to nine images can be viewed at once in Multi Replay.

1 Turn the main dial to .

2 Press the  button.
• Nine images will display at once (Multi Replay).


3 Press the  /  /  /  arrows on the omni selector to change the image selection.





Movie Frame

Selected Image



← • Pressing the  arrow in this row displays the previous set of nine images.

← • Pressing the  arrow in this row displays the next set of nine images.


4 Press the  button.
• The selected image will display in single replay.




• Press the Display button to show the data for the displayed image (p. 17).

JUMP Jumping between Images

You can jump between images in single or multi replay.

- 1 Turn the main dial to  and select either single or multi replay.
- 2 Press the Jump button.
 - The jump bar will display.
- 3 The displayed image(s) will change.

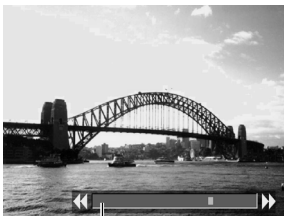





Jump Bar







Jump Bar

Single Replay

- Press the  or  arrow on the omni selector to jump 9 images behind or ahead.
- Hold the Set button and press the  or  arrow on the omni selector to jump to the first or last image.

Multi Replay

- Press the  or  arrow on the omni selector to jump to the previous or next set of nine images.
- Hold the Set button and press the  or  arrow on the omni selector to jump to the first or last set of nine images.

- 4 Press the Jump button.
 - The jump bar will cease displaying and the jump mode will cancel.

Viewing Movies

You can replay the images shot in  mode.

1 Turn the main dial to .

- Movie images cannot be replayed in multi replay.

2 Press the or arrow on the omni selector to display an image shot in mode.

3 Press the Set button.



- The movie images and sound will play.
- When a movie has finished playing, it will stop and display the last frame. If the Set button is pressed in this state, the movie will start playing from the first frame.



Pausing and Resuming Play

- Press the Set button to pause the movie. Press it again to resume.

Fast Forwarding / Rewinding

- Press the  or  arrow on the omni selector to stop the movie and display the previous or next image or movie.



- Movie images recorded on other cameras may not replay correctly. The "Unidentified image" message will display.



- The volume at which movies replay can be adjusted in the Play menu (p. 104).
- Please adjust the audio sound level on the TV when viewing movie files on a TV.


Rotating Images in the Display

Images can be rotated 90° and 270° clockwise in the LCD monitor.



Original



90°

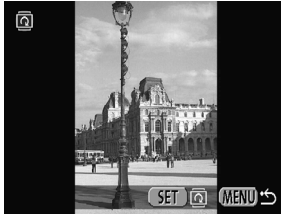

270°

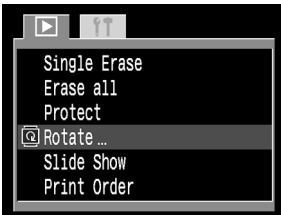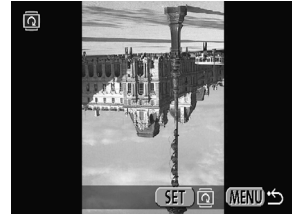

1 In the [(Play)] menu, select [Rotate] and press the Set button.

- See Selecting Menus and Settings (p. 35).



2 Press the or arrow on the omni selector to select an image you want to rotate and press the Set button.

- The image cycles to the next orientation (90° → 270° → original) each time the Set button is pressed.

3 Press the Menu button.

- The Play menu will display again. Press the Menu button again to close the menu.



- Movie images cannot be rotated.




- When images are downloaded to a computer, the orientation of images rotated by the camera will depend upon the software used to download the images.

Automated Playback (Slide Show)

Starting a Slide Show

All images, or a selection of images, can be displayed one-by-one in an automated slide show.

All Images	Plays all the images on the CF card in order
Slide Show 1 - 3	Plays the images selected for each show in order

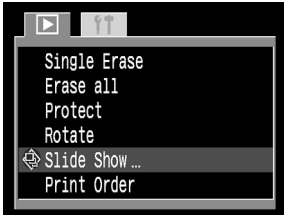

1 In the [(Play)] menu, select [Slide Show] and press the Set button.

- See Selecting Menus and Settings (p. 35).
- The slide show menu will display.



2 Press the or arrow on the omni selector to select [Program]. Press the or arrow to select between [All Images] or any one of slide [Show 1]-[Show 3].

3 Press the or arrow on the omni selector to select [Start] and press the Set button.

- The slide show will start and automatically stop when the show is done.

Pausing and Resuming a Slide Show

- Press the Set button to pause the show. Press it again to resume.

Fast Forward / Rewinding a Slide Show

- Press the or arrow on the omni selector to move on to the previous or next image.

Stopping a Slide Show

- Press the Menu button during a slide show to stop it and display the slide show menu.

- ## 4 Press the Menu button.
- The Slide Show menu will display again. Press the Menu button again to close the menu.







- Movie images play for the length of time that they were recorded regardless of the time set in the slide show settings.
- The power save function is disabled while a slide show plays on the camera (p. 29).

Selecting Images for Slide Shows




You can mark images for inclusion in slide shows 1-3. Up to 100 images may be marked per slide show. Images display in the order of their selection.

1 Display the slide show menu.







2 Press the  or  arrow on the omni selector to select [Program]. Press the  or  arrow to select [Show 1], [Show 2] or [Show 3] and press the Set button.








- A bright green bar will appear beside a show already containing images.

3 Press the ,  or  arrow on the omni selector to choose [Select] and press the Set button.

4 Mark images to include in the show.
Single Replay


- Move between images with the  or  arrow on the omni selector and mark or remove marks from images with the  and  arrow.
- The selection number and a bright green bar will show at the top of marked images.

Multi Replay

- Press the  button to switch to multi replay (3 images).
- Press the  or  arrow on the omni selector to select an image and mark or remove marks from images with the  and  arrow.
- You can deselect all the images in a show by pressing the Set button, selecting [OK] with the  or  arrow and pressing the Set button again.
- The selection number and a bright green bar will show at the bottom of marked images.

5 Press the Menu button.



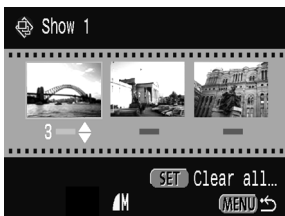



- The image selection screen will close.



Adjusting the Play Time and Repeat Settings



You can change the play time for all the images in a show and have the show repeat itself continuously.

Play Time	Sets the duration that each image in a slide show is displayed. The options are any one of 3-10 seconds, 15 seconds, 30 seconds and Manual.
Repeat	Sets whether the slide show stops when all the slides have been displayed or continues to display until stopped.

- 1 Display the slide show menu.
- 2 Press the  or  arrow on the omni selector to select [Set up] and press the Set button.
- 3 Press the  or  arrow on the omni selector to select [Play Time] or [Repeat].
- 4 Press the  or  arrow on the omni selector to select a setting.





Play Time


- Select a play time with the  or  arrow on the omni selector.



Repeat

- Select [On] or [Off] with the  or  arrow on the omni selector.


- 5 Press the Menu button.
 - The set up menu will close.

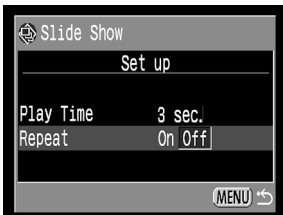

- The display interval may vary somewhat for some images.
- Slide shows can be easily edited on a computer with the supplied software. See the Software Starter Guide.

Protecting Images

You can protect important images from accidental erasure.

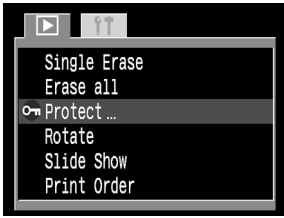

1 In the [▶] (Play) menu, select [Protect] and press the Set button.

- See Selecting Menus and Settings (p. 35).



2 Press the ◀ or ▶ arrow on the omni selector to move to and select an image you want to protect and press the Set button.

- The camera icon will appear on protected images.
- To remove the protection, click the Set button again (in protection mode).
- You can make the selection of images easier by toggling between single replay and multi replay with the button.

3 Press the Menu button.



- The protect window will close.





- Please note that formatting (initializing) a CF card erases all its data, including protected images and other types of data. Please check the contents of a CF card before formatting it.


Shooting / Replaying with a TV Monitor

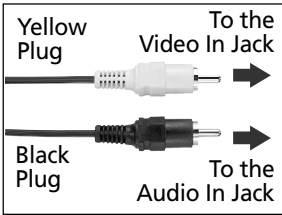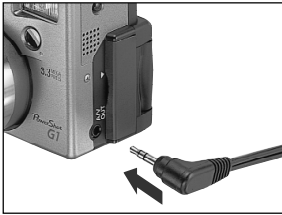A video-compatible television connected via the supplied AV cable AVC-DC100 can be used to view images as you shoot or replay them.




- 1 Turn the main dial to **OFF** and confirm that the TV is turned off.
 - 2 Attach AV cable ACV-DC100 to the A/V OUT terminal on the camera.
 - 3 Plug the other ends of the AV cable to the video in and audio in jacks on the TV.
 - 4 Turn on the TV and switch it to Video mode.
 - 5 Turn the camera's main dial to  or .
- The image will appear on the TV. Shoot or replay images as usual.
 - If the images are not appearing on the TV when shooting, press the Display button.



- No image will display in the LCD monitor when the camera is connected to a TV monitor.
- The video output signal can be switched (NTSC or PAL) to accommodate different regional standards (p. 105). The default setting will vary between regions.
 - NTSC: Japan, U.S.A., Canada, Taiwan, etc.
 - PAL: Europe, Asia (excluding Taiwan), Oceania, etc.
- Plug the audio plug of the AV cable into the TV's monaural jack. Please consult the TV's manual for details.
- A TV monitor cannot be used in  mode.

Erasing

Erasing Images Singly

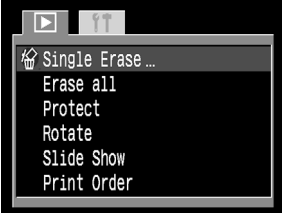


- 1** In the [▶] (Play) menu, select [Single Erase] and press the Set button.
 - See Selecting Menus and Settings (p. 35).
- 2** Press the ◀ or ▶ arrow on the omni selector to select the image you wish to erase and press the Set button.
- 3** Press the ◀ or ▶ arrow on the omni selector to select [OK] and press the Set button.
 - To continue erasing other images, repeat steps 2 - 3.
 - To cancel instead of erasing, select [Cancel] and press the Set button.
- 4** Press the Menu button.
 - The erase window will close.



- Please note that erased images cannot be recovered. Exercise adequate caution before erasing a file.
- Protected images cannot be erased with the erase function (p. 90).
- Images can be quickly deleted while they are displayed by pressing the ✖ button (p. 9).

Erasing All Images

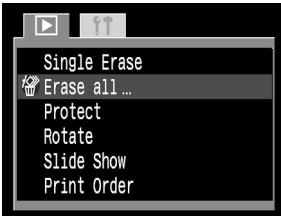

1 In the [▶] (Play) menu, select [Erase all] and press the Set button.

- See Selecting Menus and Settings (p. 35).



2 Press the ◀ or ▶ arrow on the omni selector to select [OK] and press the Set button.

- To cancel instead of erasing, select [Cancel] and press the Set button.




- Please note that erased images cannot be recovered. Exercise adequate caution before erasing a file.
- Protected images cannot be erased with the erase function (p. 90).

Formatting a CF Card


Format a CF card when you wish to delete all its data, not just the images.

Formatting may restore a CF card if it returns an error or if the "CF" message displays.

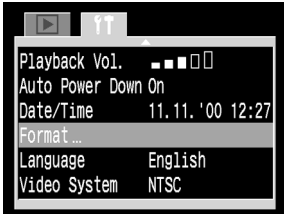

1 In the **[Fn (Set up)]** menu, select **[Format]** and press the **Set** button.

- See *Selecting Menus and Settings* (p. 35).

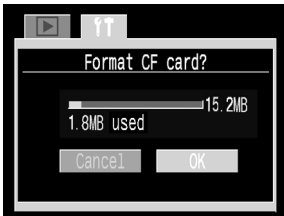

2 Press the **[Left]** or **[Right]** arrow on the omni selector to select **[OK]** and press the **Set** button.

- To cancel formatting instead, select **[Cancel]** and press the **Set** button.



- Please note that formatting (initializing) a CF card erases all data, including protected images and other file types. Please check the contents of a CF card before formatting it.




- When a non-Canon brand CF card is malfunctioning, reformatting it may solve the problem.
- CF cards formatted in another camera, computer or peripheral device may not operate correctly. When that happens, reformat the CF card with your PowerShot G1.

Print Settings (DPOF Settings)

Images on a CF card can be individually selected for printing in a specified number of copies. You can also select the print type and whether or not to print the date and file number. These settings are compatible with the Digital Print Order Format (DPOF) standards so that images can be printed on DPOF-compliant digital printers or at participating photo labs.





- The  mark will display on images that have had print marks set by another DPOF-compliant camera. These settings will be overwritten by any set by your camera.
- Print settings cannot be set for movie images or RAW images.
- The output of some digital printers or photo lab services may not reflect the specified print settings.

Selecting Images for Printing


There are two ways to select images.


- Singly
- All images on a CF card (the number of copies is set to one per image)

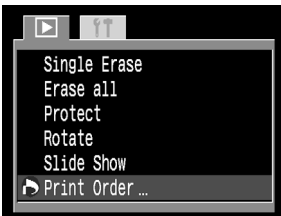

1 In the [ (Play)] menu, select [Print Order] and press the Set button.



- See Selecting Menus and Settings (p. 35).
- The Print Order menu will display.

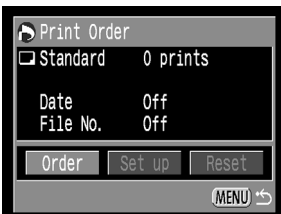

2 Press the  or  arrow on the omni selector to select [Order] and press the Set button.

Print Order Menu

3 Select images for printing.

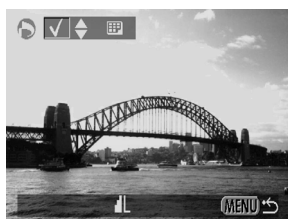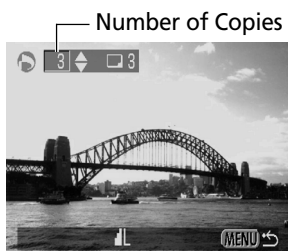

Single Images

- When the print type (p. 98) is set to [Standard] or [Both], press the or arrow on the omni selector to select an image and the or arrow to mark it for printing. You can set the number of copies (up to 99) to be printed at the same time.
- When the print type (p. 98) is set to [Index], press the or arrow on the omni selector to select an image and mark or remove marks from images with the and arrow.
- You can use the same procedures to select images in multi replay (3 images). Press the button to switch between single replay and multi replay.

All the Images on a CF Card

- Press the button to switch to multi replay (three images).
- You can set one copy of each image to print by pressing the Set button, pressing the or arrow on the omni selector to select [Mark All], and pressing the Set button again.
- When the print type is set to [Standard] or [Both], the setting for the number of print copies can be changed for each image. When [Index] is selected, the print settings can be deleted. For the instructions for changing settings, please reread Step 3 from the beginning.
- Selecting [Clear all] removes the print marks for all the images on the CF card.

4 Press the Menu button.

- The selection mode will turn off and the Print Order menu will reappear.




-
- Images are printed in order from oldest to newest by the shooting date.
 - A maximum of 998 images can be marked per CF card.
 - When [Both] is selected, the number of copies can be set, but applies to standard prints only. Only one copy can be set to print with the [Index] setting.
 - Print settings can also be assigned to images with the supplied software programs on a computer.

Setting the Print Style

The following print settings can be selected.

Print Type	Standard	Prints one image per page
	Index	Prints the selected images together at a reduced size in an index format
	Both	Prints the images in both the standard and index formats
Date		Adds the date to the print
File No.		Adds the file number to the print

1 Display the Print Order menu.

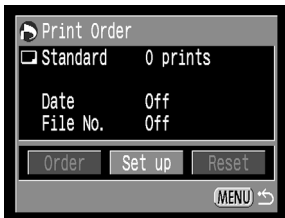


2 Press the or arrow on the omni selector to select [Set up] and press the Set button.

3 Press the or arrow on the omni selector to select [Print Type], [Date] or [File No.]

4 Press the or arrow on the omni selector to select a setting.


Print Type


- Press the or arrow on the omni selector to select [Standard], [Index] or [Both].

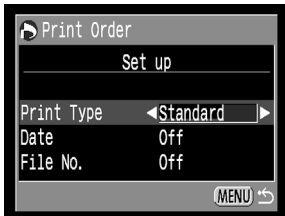



Date

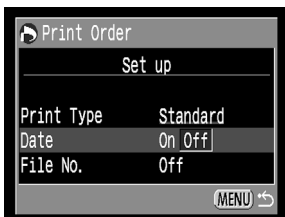- Press the or arrow on the omni selector to select [On] or [Off].

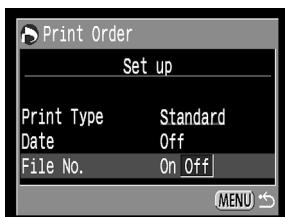



File No.

- Press the  or  arrow on the omni selector to select [On] or [Off].

5

Press the Menu button.

- The set up menu will close.



-
- The [Date] and [File No.] options cannot both be set to [On] when the print type is set to [index].






-
- The date prints as the date and time in the format specified in the Set Date/Time menu (p. 30).

Resetting the Print Settings

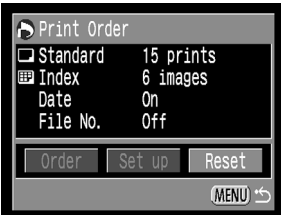

The print settings can all be removed at once. The print type is reset to [Standard] and the date and file number options are set to [Off].

1 Display the Print Order menu.



2 Press the  or  arrow on the omni selector to select [Reset] and press the Set button.








3 Press the  or  arrow on the omni selector to select [OK] and press the Set button.







List of Menu Options

The chart below lists menu items and settings. See *Selecting Menus and Settings* (p. 35) to learn how to select a setting.


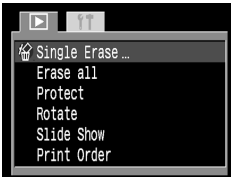

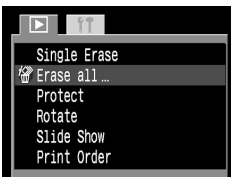

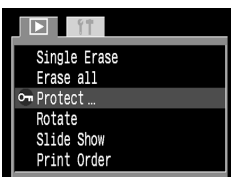

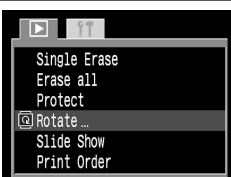

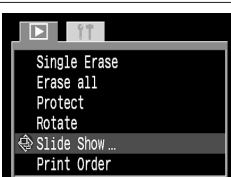

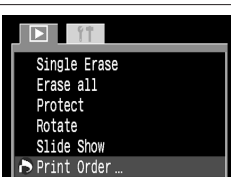
Rec. Menu

* Some items may not appear in certain shooting modes (p. 79).

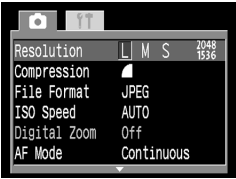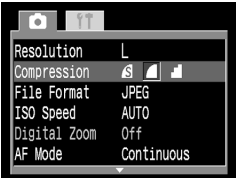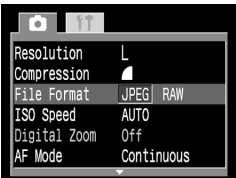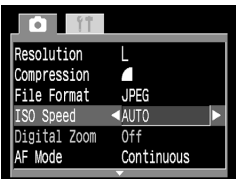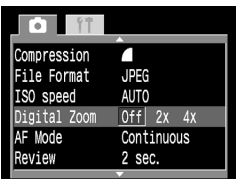

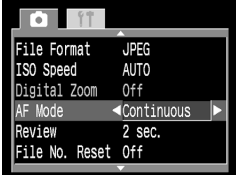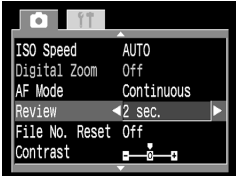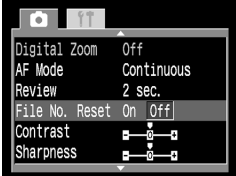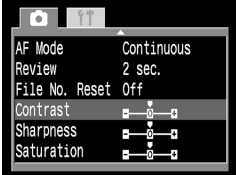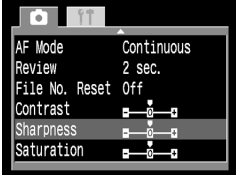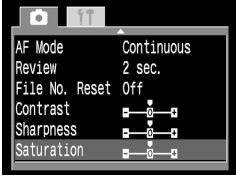












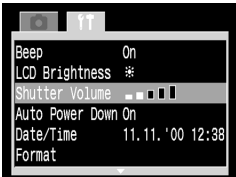



Item	Menu Screen	Settings Content	Reference Page
Resolution		<p>Sets the number of pixels used to record images to CF cards.</p> <ul style="list-style-type: none"> • L Large (2048 x 1536 pixels) • M Medium (1024 x 768 pixels) • S Small (640 x 480 pixels) 	p. 54
Compression		<p>Sets the relative compression ratio used to record images to CF cards.</p> <ul style="list-style-type: none"> • S Superfine • F Fine • N Normal 	p. 54
File Format		<p>Sets the file format used to record images to CF cards.</p> <ul style="list-style-type: none"> • JPEG • RAW 	p. 56
ISO Speed		<p>Sets the sensitivity at which images are recorded.</p> <ul style="list-style-type: none"> • 50 • 100 • 200 • 400 • AUTO 	p. 77
Digital Zoom		<p>Activates the digital teleconverter function to electronically zoom subjects.</p> <ul style="list-style-type: none"> • Off • 2x • 4x 	p. 53





Item	Menu Screen	Settings Content	Reference Page
AF Mode		Sets the frequency of autofocus activation. When the LCD monitor is off, this setting locks in single mode. <ul style="list-style-type: none"> • Continuous • Single 	p. 76
Review		Sets the duration images display on the LCD monitor after the shutter button is released. <ul style="list-style-type: none"> • Off • 2 sec. • 10 sec. 	p. 39
File No. Reset		Sets how file numbers are assigned to images when new CF cards are inserted. <ul style="list-style-type: none"> • On • Off 	p. 78
Contrast		Adjusts the image contrast. <ul style="list-style-type: none"> • - • 0 • + 	p. 77
Sharpness		Adjusts the image sharpness. <ul style="list-style-type: none"> • - • 0 • + 	p. 77
Saturation		Adjusts the image saturation. <ul style="list-style-type: none"> • - • 0 • + 	p. 77

Play Menu

Item	Menu Screen	Settings Content	Reference Page
 Single Erase...		Erases images one-by-one (excluding protected images). While displayed images can also be quickly deleted by pressing the * button.	p. 92
 Erase all...		Erases all images from a CF card (excluding protected images).	p. 93
 Protect...		Protects images from accidental erasure.	p. 90
 Rotate...		Rotates images 90 or 270 degrees clockwise in the display.	p. 85
 Slide Show...		Plays images in an automated slide show.	p. 86
 Print Order...		Sets the images that will be printed on a DPOF-compatible printer or at a photo lab service, the number of copies and other parameters.	p. 95

Set up Menu

Item	Menu Screen	Settings Content	Reference Page
Beep		Sets whether or not the beep sounds when the shutter button is pressed halfway or when a menu operation is performed. <ul style="list-style-type: none"> • On • Off 	p. 34
LCD Brightness		Sets the brightness level of the LCD monitor. <ul style="list-style-type: none"> •  (Normal) •  (Bright) 	p. 32
Shutter Volume (Shooting)		Adjusts the sound volume when the shutter button is pressed all the way. The beep does not sound while a movie is being shot. <ul style="list-style-type: none"> •  (Off) •  (1) •  (2) •  (3) •  (4) •  (5) 	p. 34
Playback Vol. (Replay)		Adjusts the sound volume when a movie is played. <ul style="list-style-type: none"> •  (Off) •  (1) •  (2) •  (3) •  (4) •  (5) 	p. 84
Auto Power Down		Sets whether or not the camera automatically powers down after a specified period of time elapses without something being pressed. <ul style="list-style-type: none"> • On • Off 	p. 29

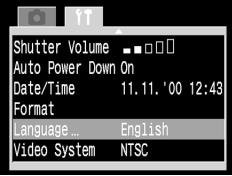Item	Menu Screen	Settings Content	Reference Page
Date/Time...		Sets the date, time and date format.	p. 30
Format...		Formats (initializes) a CF card.	p. 94
Language...		<p>Sets the language used in the menus and messages on the LCD monitor. The menu may appear differently in some regions.</p> <ul style="list-style-type: none"> • English • Deutsch • Français • Español or • Japanese • English • Deutsch • Français • Nederlands • Dansk • Suomi • Italiano • Norsk • Svenska • Español <p>You can change the language during image replay by holding the Set button and pressing the Jump button.</p>	—
Video System		<p>Sets the video output signal standard.</p> <ul style="list-style-type: none"> • NTSC • PAL 	p. 91


Using the Wireless Controller

Installing the Battery


Install the button battery (CR2025) into Wireless Controller WL-DC100 before use.



- Be particularly careful to keep the button batteries out of the reach of children. Seek medical assistance immediately if a child swallows a battery since corrosive battery fluids could damage the stomach or intestinal wall.

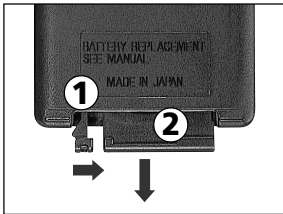

- 1 Place your fingertip on ① and press it in the direction of the arrow while placing another fingertip on ② and removing the battery holder.

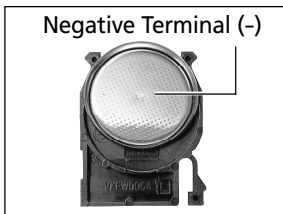

- 2 Place the button battery in the battery holder with the negative terminal (-) facing up.
- 3 Replace the battery holder into the wireless controller.

Removing the Battery




To remove the button battery, pull it in the direction of the arrow.

If you should dispose of your camera, first remove the button battery for recycling according to the recycling system of your country.



Shooting / Replaying

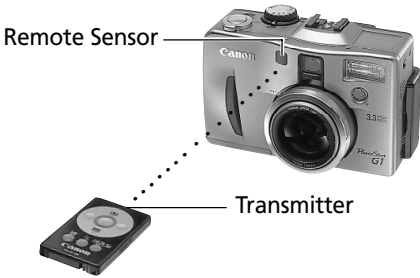

The wireless controller can be used from approximately 5 m (16.4 ft) directly in front of the camera to shoot or replay.

Shooting

Press the button on the camera until the icon appears in the display panel, then replay with the wireless controller.




- (1) Compose the image with the zoom buttons.
- (2) Press the shutter button.
The camera will shoot the image 2 seconds later.

- Each press of this button cycles the LCD monitor to the next display mode. The order is on (no information) / on (information view) / off.

Replaying

The icon appears in the display panel.

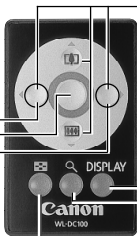

- Display the previous image
- Replay the movie images
- Display the next image
- In magnified mode, these buttons move the magnified area around the image.
- In multi replay, these buttons move the image selection to other image.
- The display mode changes with each press of the button.
- The display cycles between magnifications of approximately 2.5, 5 or normal.
- Displays images in sets of nine (multi replay).






- The operable range of the wireless controller will shorten under the following circumstances.
 - When the wireless controller is used at an angle to the remote sensor.
 - When strong light strikes the camera.
 - When the battery is weak.

Using an Externally Mounted Flash (Optional)




You can make your flash photography even clearer and more natural appearing with the use of a separately sold externally mounted flash. The camera's auto exposure function will operate with a Canon Speedlite 220EX, 380EX, 420EX or 550EX. Other flashes will fire at full strength. Non-Canon brand flashes may not fire. Please check the manual for your flash. (Certain functions noted in the manuals for the Speedlite 220EX, 380EX, 420EX and 550EX cannot be performed when mounted on this camera. Please read this guide before using one of these flashes on the camera.)



Speedlite 420EX Mounted on the Hot Shoe

- 1 Attach the flash to the camera's hot shoe.
- 2 Turn the external flash on and turn the camera's main dial to .
- 3 Turn the mode dial to a mode other than  or .

Speedlite 220EX, 380EX, 420EX or 550EX

- The flash will automatically adjust its output in the **AUTO**, , , , **BW**, **P**, **Tv** and **Av** modes. The maximum flash synchro shutter speed is 1/250 second.
- The flash will fire at full strength in **M** mode. Manually set the shutter speed and aperture to appropriate settings in this mode. At shutter speeds slower than 1/250 second (maximum flash synchro shutter speed) determine the appropriate aperture value setting from the flash's guide number and the distance to the subject.

Other Flashes



- Since other flashes fire at full strength, set the shutter speed and aperture accordingly. At shutter speeds slower than 1/125 second (maximum flash synchro shutter speed) determine the appropriate aperture value setting from the flash's guide number and the distance to the subject.

4 Press the shutter button halfway to focus.

- The flash is charged when its pilot lamp lights up. If the LCD monitor is on, the ⚡ icon will display.

5 Press the shutter button all the way to shoot the image.



- The flash will not fire in ,  or continuous mode.
- The AEB mode cannot be used for flash photography. If the flash fires, only one image gets recorded.
- Please note that proprietary high-voltage flashes with multi contacts or flash accessories made by other manufacturers may cause a camera malfunction.



- The following functions can be used with a Speedlite 220EX, 380EX, 420EX or 550EX.
 - Auto Exposure (Use the E TTL mode with a 550EX)
 - FE Lock (Not available in **M** mode)
 - Daylight Synchro
 - Slow Synchro
 - Flash Exposure Compensation (If a 550EX is used, the range figures on the flash's display panel will not display correctly. Use the camera's flash exposure compensation function instead.)
 - Auto Zoom (Not available with the 220EX)

Using Conversion Lenses (Optional) / Close-up Lenses (Optional)

The separately sold Conversion Lens Adapter LA-DC58 is required to use conversion and close-up lenses with the camera, such as the separately sold Wide Converter WC-DC58, Tele-converter TC-DC58 and Close-up Lens 250D (58 mm).



- Ensure that the wide converter, tele-converter and close-up lens are firmly screwed onto the adapter. Injury from glass shards can occur if the lens loosen and fall off.
- Never aim the wide converter, tele-converter or close-up lens directly at the sun or bright lights.

Wide Converter WC-DC58



This 58 mm-threaded diameter magnifying conversion lens is for taking wide angle shots. The lens augments the focal length of the camera body's lens by a factor of 0.8.

Tele-converter TC-DC58



This 58 mm-threaded diameter magnifying conversion lens is for taking telephoto shots. The lens augments the focal length of the camera body's lens by a factor of 1.5.



- An externally mounted flash may not automatically adjust its output when a conversion lens is mounted on the camera. You may have to set the camera to manual mode and set the shutter speed and aperture to appropriate settings in this case.
- Do not attach filters or lens hoods to the wide converter or tele-converter.
- When using the built-in flash to shoot, a portion of the image may be blocked by the wide converter or tele-converter and appear dark.
- When using the viewfinder to shoot, a portion of the image in the viewfinder may appear to be blocked by the wide converter or tele-converter.
- Use the wide converter lens with the focal length set to the maximum wide angle setting.
- Use the tele-converter lens with the focal length set to the maximum telephoto setting. At other zoom settings, the image will not appear correctly.

Close-up Lens 250D (58 mm)



This lens with a 58 mm-threaded diameter makes macro shooting easier. With the camera in macro mode, it can shoot subjects in the range of 12 to 20 cm (4.7 to 7.9 in) from the lens tip.



- Do not use the built-in flash to shoot when the close-up lens is installed on the camera.

Installing the Lenses



- 1** Remove the ring from around the lens on the camera body.




- 2** Screw on Conversion Lens Adapter LA-DC58 in the direction of the arrow.



- 3** Screw on the lens in the direction of the arrow.

Wide-Converter WC-DC58
Installed



-
- Since the image seen in the viewfinder does not change when a conversion lens is installed, use the LCD monitor to compose images.
 - Please note that images will not merge properly with the bundled PhotoStitch program on the computer when they are shot in  mode with a conversion or close-up lens installed.
 - To protect the conversion lenses, hold them with one hand while you screw them on with the other hand.
 - Completely remove all dust and dirt from conversion lenses with a lens blower brush before use. The camera may focus on any dirt that remains.
 - Exercise due caution when handling the conversion lenses since it is easy to dirty them with fingerprints.


Downloading Images to a Computer

Downloading Directly from a CF Card


If you are using a notebook computer or a PC card reader, you can download directly from a CF card placed into the separately sold PC card adapter (PCMCIA adapter). The adapter is not required if your computer is equipped with a CF card reader. Place the CF card directly into the reader.

Inserting the CF Card

PC Card Reader Example

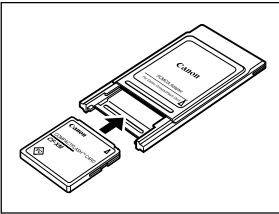


- 1** Eject the CF card from the camera and place it in the PC card adapter (optional).

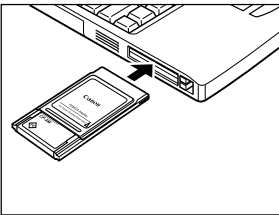

- 2** Place the PC card adapter into the computer's PC card slot or into a PC card reader.

- Some computers or PC card readers require the power to be off when the PC card adapter is inserted into the PC card slot. Since this requirement varies between models, please consult the manual for your equipment.

CF Card Reader Example

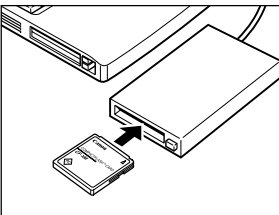

- 1** Eject the CF card from the camera and place it in a CF card reader connected to the computer.

- Some computers or CF card readers require the power to be off when the CF card is inserted. Since this requirement varies between models, please consult the manual for your equipment.

Downloading Images

Please refer to the Software Starter Guide for downloading instructions.

- 1** Double-click the disk drive icon of the drive to which the CF card is connected.
- 2** Copy the photographed images to the desired folder on the hard disk.


- The images are contained in the [XXXCANON] folder inside the [DCIM] folder on the CF card. The XXX represents a number from 100 to 998.



- Viewing Images Downloaded to a Computer
 - To view images shot in the JPEG format, a software program handling JPEG files, such as Photoshop, is required.
 - To view images shot in the RAW format, the supplied driver software is required.
- Viewing Movies Downloaded to a Computer
 - If you attempt to view a movie file (.AVI extension) by double-clicking it in the Windows Explorer, you may cause the Windows Media Player to start, which will interfere with the replay. To play a movie, first start QuickTime Player and then open the movie file from that program's file menu. QuickTime 3.0 or a higher version is required to start QuickTime Player. QuickTime may be downloaded from the Apple Computer, Inc., website.



About File Names

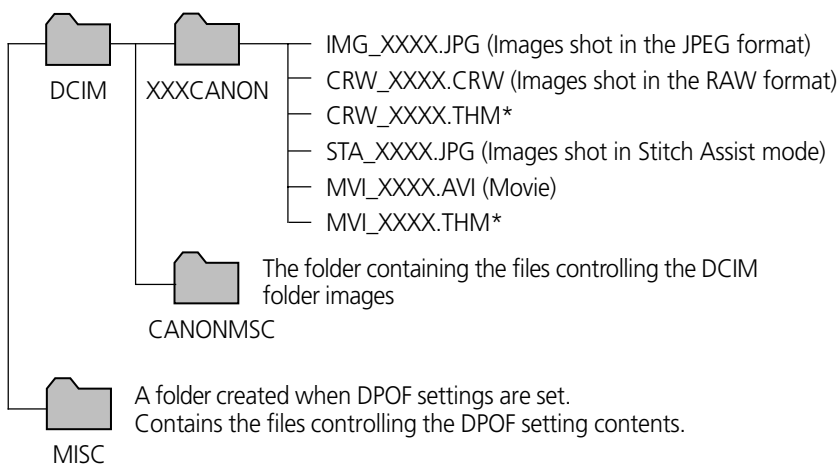

* These files contain thumbnail images for the index display.

- A number will appear in place of each "X" in the file names.



- Do not open or delete files in folders other than [XXXCANON]. Those files are required for image management.

Using the Supplied Interface Cables

Supported Operating Systems

Windows

Windows 95, Windows 98 (including Second Edition), Windows Millennium Edition (Windows Me), Windows NT 4.0 (Service Pack 3 or later), Windows 2000.

* The USB interface is only supported for preinstalled Windows 98/Me/2000 systems or systems upgraded to Windows Me from preinstalled Windows 98 systems.

Macintosh Computer

Mac OS 8.1 or higher
QuickTime 3 or higher.

* The USB interface is only supported for genuine Apple Computer brand models with built-in USB ports.

The supplied interface cables can be used to connect the camera to a computer to download the images. First install the supplied software and then connect to the computer using one of the methods below. Please see the separate Software Starter Guide to learn how to install the software and download the images.



- You are recommended to use a household power source when downloading images to a computer to avoid draining the battery pack.

USB Interface (p. 118)

• Windows and Macintosh Computers

The USB interface is fast and convenient. It transfers images faster than the serial interface and can start software automatically when its cable is connected.

USB Cable Connector Shapes

Camera End



Computer End



Computer USB Port




The USB port is marked with this symbol.

CF Card Reader or PC Card Slot (p. 113)

- Windows and Macintosh Computers

If you have a CF card reader or a notebook PC with a PC card slot (optional PC card adapter required), or a PC card reader (optional PC card adapter required), you can connect directly to the CF card.

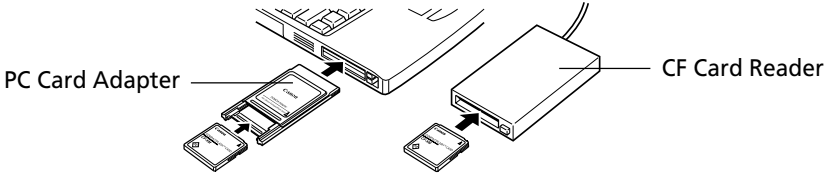


Serial Interface - for Windows 95 / NT 4.0 or Macintosh computers lacking a built-in USB port (p. 120)

A serial cable is not included with the camera. Please arrange to purchase one to use the serial interface.

- Windows (The separately sold Interface Cable IFC-200PCS is required)


Serial Cable Connector Shapes

Camera End



Computer End

Computer Serial Port



- Macintosh (The separately sold Interface Cable IFC-200MC is required)


Serial Cable Connector Shapes

Camera End



Computer End

Computer Serial Port

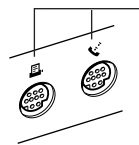

Serial ports (printer, modem) are identified with these symbols.

Connecting via a USB Port




-
- On a Windows system, the USB interface can only be used with the USB ports on systems purchased with Windows 98 or 2000 preinstalled. The USB ports on systems upgraded from Windows 3.1 or 95 to Windows 98 or 2000 will not operate correctly. The same applies to upgrades from Windows 98 to 2000.
 - On a Macintosh system, the USB interface can only be used with Power Macintosh NEW G3/G4, PowerBook G3, iMac and iBook models with built-in USB ports.
 - Connect the USB cable directly to the camera and computer. A connection through a hub may not operate correctly.
 - Excluding USB mice and keyboards, connecting other USB devices at the same as the camera may lead to malfunctions. If this happens, detach all the USB devices and then reconnect only the camera.
 - Do not connect two or more cameras to the same computer at once. A camera malfunction may result.



-
- Do not place a Windows computer into standby mode or a Macintosh computer into sleep mode when the camera is connected via a USB port. If, by chance, this occurs, leave the camera connected to the USB port and try to revive the computer. Some computers cannot be properly restored from standby or sleep mode when the USB cable is subsequently detached. Please consult the manual for your computer regarding the standby or sleep mode.


1 Connect the supplied USB cable to the computer's USB port and the camera's Digital terminal.

- There is no need to shut off the camera or computer power when using the USB cable.
- Please consult the manual for the computer for the position of its USB ports.

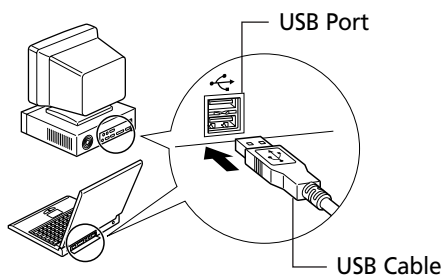

Digital Terminal


1. Insert a fingernail in the terminal cover's notch to open it.

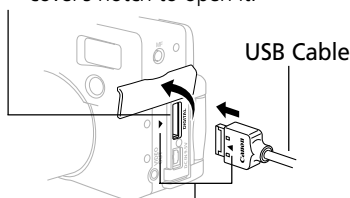

2. Align the arrows to insert the cable into the camera.

2 Turn the camera's main dial to .

- Always press the PUSH button on the connector to detach the cable from the camera's Digital terminal.

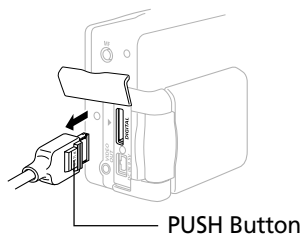


Please consult the separate Software Starter Guide for the remaining downloading procedures.

Connecting via a Serial Port

- 1 Turn the computer's power off and turn the camera's main dial to **OFF**.
- 2 Connect the camera to the computer.


Windows

- Attach interface cable IFC-200PCS (optional) to the computer's serial port and the camera's Digital terminal.
- Please consult the computer's manual for the position of the serial port (COM port).

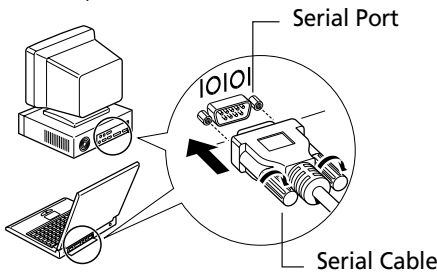


Digital Terminal


1. Insert a fingernail in the terminal cover's notch to open it.

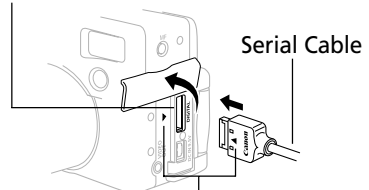

2. Align the arrows to insert the cable into the camera.


Macintosh Computer

- Attach interface cable IFC-200MC (optional) to the computer's printer or modem port and the camera's Digital terminal.
- Please consult the computer's manual for the position of the printer and modem ports.
- If AppleTalk is set to use the printer or modem port, open the Apple menu  and select [Chooser] to set AppleTalk to [Inactive].

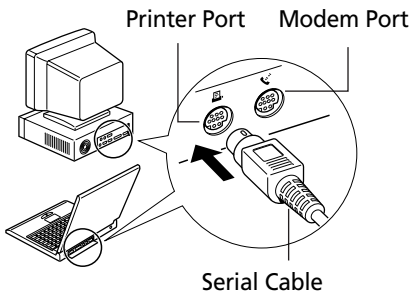

Digital Terminal

1. Insert a fingernail in the terminal cover's notch to open it.

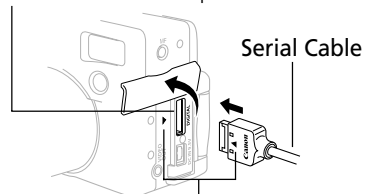


2. Align the arrows to insert the cable into the camera.

3 Turn on the computer.

4 Turn the camera's main dial to ↻.



- Always press the PUSH button on the connector to detach the cable from the camera's Digital terminal.

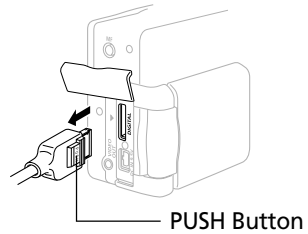

Please consult the separate Software Starter Guide for the remaining downloading procedures.

Appendices


Replacing the Button Battery

If the Set Date/Time menu appears when you turn on the camera power, the button battery charge is low and the date and time settings have been lost. Please replace the battery with a generic CR2016 lithium button battery with the following procedures.


The button battery is preinstalled at the factory and may therefore expire earlier than its rated lifespan after the camera has been purchased.



- Be particularly careful to keep the button batteries out of the reach of children. Seek medical assistance immediately if a child swallows a battery since corrosive battery fluids could damage the stomach or intestinal wall.

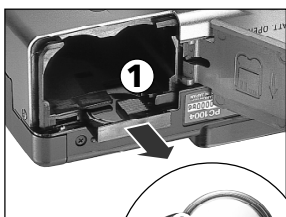


Groove

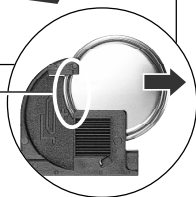

- 1 Turn the main dial to **OFF**.
- 2 Slide the battery cover lock in the direction of the arrow and push the battery cover open.
- 3 Remove the battery pack.
- 4 Push point ① with your fingertip while pulling the button battery holder out to remove it.
- 5 Insert a fingernail into the groove in the button battery and push it out in the direction of the arrow.

Negative Terminal (-)

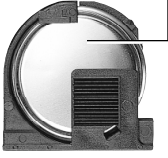

6 Place a new button battery into the button battery holder with the negative terminal (-) facing upward.

7 Replace the button battery holder, replace the battery pack and close the battery cover.

If you should dispose of your camera, first remove the button battery for recycling according to the recycling system of your country.



Camera Care and Maintenance




Use the following procedures to clean the camera body, lens, viewfinder, LCD monitor and other parts.



Camera body	Wipe the body clean with a soft cloth or eyeglass lens wiper.
Lens	First use a lens blower brush to remove dust and dirt, then remove any remaining dirt by wiping the lens lightly with a soft cloth. <ul style="list-style-type: none">• Never use synthetic cleansers on the camera body or lens. If dirt remains, contact the nearest Canon Customer Support Help Desk (see the back of this guide).
Viewfinder / LCD monitor	Use a lens blower brush to remove dust and dirt. If necessary, gently wipe the viewfinder and LCD monitor with a soft cloth or an eyeglass lens wiper to remove stubborn dirt. <ul style="list-style-type: none">• Never rub or press forcefully on the LCD monitor. These actions may damage it or lead to other problems.



- Never use thinners, benzene, synthetic cleansers or water to clean the camera. These substances may distort or damage the equipment.

Troubleshooting

Problem	Cause	Solution
Camera will not operate	Power is not turned on	<ul style="list-style-type: none"> • Turn the main dial to a position other than OFF.
	Battery cover or CF card slot cover is open	<ul style="list-style-type: none"> • Confirm that the battery cover is securely closed. • Confirm that the CF card slot cover is securely closed.
	Insufficient battery voltage ([Lb] flashes in display panel)	<ul style="list-style-type: none"> • Fully charge the battery or use a household power source.
	Poor contact between camera and battery terminals	<ul style="list-style-type: none"> • Wipe the terminals with a clean, dry cloth.
Camera will not record	Main dial is set to OFF ,  or 	<ul style="list-style-type: none"> • Turn the main dial to  (Shooting).
	Flash is charging (flashing orange indicator)	<ul style="list-style-type: none"> • Wait until the orange indicator stops flashing and shines steadily, signaling that the flash is charged, then press the shutter button.
	CF card full	<ul style="list-style-type: none"> • Insert a new CF card. • If required, download the images to a computer and erase them from the CF card to make space.
	CF card not formatted correctly	<ul style="list-style-type: none"> • Format CF card. → See Formatting a CF card (p. 94) • If reformatting doesn't work, the CF card logic circuits may be damaged. Contact the nearest Canon Customer Support Help Desk.
Lens will not retract	Battery cover or CF card slot cover opened immediately after main dial turned to OFF	<ul style="list-style-type: none"> • Close the battery cover or CF card slot cover, and then turn the main dial on and back to OFF.
	Battery cover or CF card slot cover opened while camera was recording to the CF card (warning signal)	<ul style="list-style-type: none"> • Close the battery cover or CF card slot cover, and then turn the main dial to OFF.
Battery pack consumed quickly	Battery pack capacity reduced because of disuse for one year or more	<ul style="list-style-type: none"> • Replace the battery pack with a new one.
	Battery life exceeded	

Problem	Cause	Solution
Battery pack will not charge	Main dial is not turned to OFF .	<ul style="list-style-type: none"> Turn the main dial to OFF.
	Battery life exceeded	<ul style="list-style-type: none"> Replace the battery pack with a new one.
	Poor contact between camera and compact power adapter	<ul style="list-style-type: none"> Plug the compact power adapter's DC plug more firmly into the camera's DC IN terminal. Connect the power cord to the compact power adapter and insert its plug firmly into the electrical outlet.
Image is blurred, out of focus, or not as expected	Camera moved	<ul style="list-style-type: none"> Be careful not to move the camera when pressing the shutter button.
	Autofocus function hampered by obstruction to AF auxiliary light emitter	<ul style="list-style-type: none"> Be careful not to block the AF auxiliary light emitter with your finger or other items.
	Subject out of focal range	<ul style="list-style-type: none"> Ensure that there is at least 70 cm (2.3 ft.) between the camera lens and subject. Use the macro mode to shoot close-ups between 6 and 70 cm (2.4 in. and 2.3 ft.) at maximum wide angle and 20 and 70 cm (7.9 in. and 2.3 ft.) at maximum telephoto.
Subject is too dark	Insufficient light for shooting	<ul style="list-style-type: none"> Set the built-in flash to on. Use a high-output externally mounted flash.
	Subject dark in comparison to the background	<ul style="list-style-type: none"> Set the exposure compensation to a positive (+) setting. Use the AE lock or spot metering function.
	Subject too far for flash to reach	<ul style="list-style-type: none"> To use the built-in flash, shoot within 70 cm to 4.5 m (2.3 to 14.8 ft.) of the subject at the maximum wide angle and within 70 cm to 3.6 m (2.3 to 11.8 ft.) at the maximum telephoto setting. Use an externally mounted flash with a large output.
Subject is too bright	Subject too close	<ul style="list-style-type: none"> If you are using a flash, adjust the flash output with the flash exposure compensation function (p. 68).
	Subject bright in comparison to the background	<ul style="list-style-type: none"> Set the exposure compensation to a negative (-) setting. Use the AE lock or spot metering function.
	Light shining directly on subject or reflected off subject into camera	<ul style="list-style-type: none"> Change the shooting angle.
	Flash set to On	<ul style="list-style-type: none"> Set the flash to Auto or Off.
Flash will not fire	Flash set to Off	<ul style="list-style-type: none"> Set the flash to Auto or On.
Image not showing on TV	Incorrect video system setting	<ul style="list-style-type: none"> Set the video system to the appropriate setting, NTSC or PAL, for your TV → (See Set up Menu, p. 105).
Zoom does not operate	Mode dial is turned to  .	<ul style="list-style-type: none"> Turn the mode dial to any shooting mode except for .
	Zoom lever was pressed while shooting in movie mode.	<ul style="list-style-type: none"> Operate the zoom before shooting in movie mode.

List of Error / Message Codes

The following error and message codes may appear on the display panel.


Error Codes


E_{xx}:
(xx: number) The camera has experienced a problem. Turn the main dial to **OFF**, wait a second, and then try shooting or replaying. If the error code appears repeatedly, there is a problem. Note the error code number and take the camera in for servicing. If an error code appears immediately after a shot, there is a chance that the image was not recorded. Check the image in replay mode.


Message Codes

P_b: Replaying image.

P_C: Connected to computer in PC connection mode.

: Adequate battery charge.

: Low battery charge. Charge the battery as soon as possible to use for any length of time.


L_b Battery charge low, camera will not operate. Immediately recharge or replace the battery pack with a charged one.
Could also indicate that the battery cover is open. Close the cover securely.

CF: No CF card in camera, CF card slot cover is open, or CF card error.

LENS: Power turned on with lens cap on. Remove cap, then turn power off and on again.

List of Messages

The following messages may appear on the LCD monitor.

Busy...	Image is being recorded to, or read from, CF card.
No CF card:	You attempted to shoot or replay images without a CF card installed.
Cannot record!:	You attempted to shoot an image without a CF card installed.
CF card error!:	CF card has experienced an anomaly.
CF card full:	CF card is too full to accommodate more images or print settings.
Naming error!:	The file could not be created because there is a file with the same name as the directory that the camera is attempting to create, or the highest possible file number has already been reached. In the Rec. menu, please set [File No.] Reset to [On]. After you save all the images you wish to retain onto a computer, format the CF card (p. 94). Please note that formatting will erase all the existing images and other data.
Change the battery pack:	Battery charge is insufficient to operate the camera. Replace it immediately with a charged battery pack or recharge it.
No image:	No images recorded on CF card.
Image too large:	You attempted to replay an image larger than 3200 x 2400 pixels.
Incompatible JPEG format:	You attempted to replay an incompatible JPEG file.
Corrupted data:	You attempted to replay an image with corrupted data.
RAW:	You attempted to replay an image recorded in an incompatible RAW format.
Cannot magnify!:	You attempted to magnify an image that was photographed with another camera, recorded in a different format, or edited on a computer.
Cannot rotate:	You attempted to rotate an image that was photographed with another camera, recorded in a different format, or edited on a computer.

Unidentified Image	You attempted to replay an image that was recorded in a special format (proprietary format used by the camera of another manufacturer, etc.).
Protected!:	You attempted to erase a protected image.
Too many marks:	Too many images have been marked for printing or for inclusion in a slide show. Cannot process any more.
Cannot mark image:	You attempted to set the print settings for a non-JPEG file.
Cannot complete!:	Couldn't save the print or slide show settings.
Cannot edit:	Slide show settings file is corrupted

Specifications

PowerShot G1	
Image sensor:	Approx. 3.34 million-pixel (total) / 1/1.8 inch CCD (Effective number of pixels: approx. 3.24 million)
Lens:	7 (W) - 21 (T) mm (35mm film equivalent: 34 - 102mm) F 2.0 (W) - 2.5 (T)
Digital tele-converter:	2x, 4x (Maximum 12x digital zoom is available when combined with optical zoom)
Autofocus method:	TTL autofocus (continuous or single) Focus lock and Manual focus are available
Focusing range: (from tip of the lens barrel)	Normal AF: 70 cm (2.3 ft.) - ∞ Macro AF: 6 cm (W) / 20 cm (T) - 70 cm (2.4 in. (W) / 7.9 in. (T) - 2.3 ft.) Manual focus: 6 cm (W) / 20 cm (T) - ∞ (2.4 in. (W) / 7.9 in. (T) - ∞)
Shutter:	Mechanical shutter + electronic shutter
Shutter speeds:	8 - 1 / 1000 sec. 8 sec. shutter is available in Shutter-Priority mode or Manual mode High-speed shutter settings from 1/640 to 1/1000 sec. are available only at F8 aperture setting Slow shutter speeds of 1.3 sec. or more operates with noise reduction
Sensitivity (equivalent film speed) :	Auto, ISO 50, ISO 100, ISO 200 and ISO 400 equivalent (In Auto mode, camera automatically adjusts sensitivity in the range of ISO 50 to ISO 100 equivalent)
Light metering method:	Center-weighted average metering or Spot metering
Exposure control method:	Program AE, Shutter-priority AE, Aperture-priority AE or Manual exposure control AE lock is available
Exposure compensation:	± 2.0EV (in 1/3-stop increments) Auto exposure bracketing (AEB) is available
White balance:	TTL auto white balance, pre-set white balance (available settings: Daylight, Cloudy, Tungsten, Fluorescent or Flash) or Custom white balance
Built-in flash:	Operating modes: Auto, Red-eye reduction auto, Red-eye reduction On, On or Off Flash range: 70 cm - 4.5 m (2.3 ft. - 14.8 ft.) (W), 70 cm - 3.6 m (2.3 ft. - 11.8 ft.) (T) (When sensitivity is set to ISO 100 equivalent)

(W): wide angle (T): telephoto

Terminals for external flash:	Sync-terminals at accessory shoe Use of following external flashes is recommended: Canon Speedlite 220EX, 380EX, 420EX and 550EX
Flash exposure compensation:	± 2.0EV (in 1/3-stop increments)
Shooting modes:	Auto Creative zone: Program, Shutter speed priority, Aperture priority and Manual Image zone: Pan-focus, Portrait, Landscape, Night scene, Black & white, Stitch Assist and Movie
Self-timer:	Activates shutter after a 10-sec. delay
Wireless control:	Shooting and playback are available (wireless controller is included in the camera kit) When shooting, image is captured 2 seconds after shutter button pressed
PC-connected shooting:	Available (USB connection only. Exclusive software program is included in the camera kit)
Continuous shooting:	Approx. 1.7 image/sec. (Large / Fine mode with LCD viewfinder off)
Optical viewfinder:	Real-image optical zoom viewfinder
LCD viewfinder:	1.8-inch, low-temperature polycrystalline silicon TFT color LCD
Storage media:	CompactFlash™ (CF) card (Type I and Type II)
File format:	Design rule for Camera File system, DPOF-compliant
Image recording format:	Still images: JPEG or RAW Movies: AVI (Image data: Motion JPEG, Audio data: WAVE [monaural])
JPEG compression mode:	Super fine, Fine or Normal
Number of recording pixels:	Still images: Large: 2048 x 1536 pixels Medium: 1024 x 768 pixels Small: 640 x 480 pixels Movies: 320 x 240 pixels at 15 frames/sec., up to approx. 30 sec. per movie
Playback modes:	Single, Multi (9 thumbnail images), Magnified (approx. 2.5x or 5x on build-in LCD monitor) or Slide show
Interface:	Universal Serial Bus (USB), RS-232C, Audio/Video Output (NTSC or PAL selectable, monaural audio) and CF card slot (complied with CF Type II standard)
Power source:	1. Rechargeable Lithium-ion battery (type: BP-511) (included in the camera kit) 2. AC adapter (included in the camera kit) 3. Car battery adapter (Optional Charge Adapter/Car Battery Cable Kit CR-560 is required)
Operating Temperatures:	0 - 40° C (32 - 104° F)

Operating Humidity:	10 - 90 %
Dimensions (W x H x D):	119.7 x 76.8 x 63.8 mm (4.7 x 3.0 x 2.5 in.) (excluding protrusions)
Weight:	Approx. 420 g (14.8 oz.) (camera body only)

Battery Pack BP-511

Type:	Rechargeable lithium ion cell
Nominal voltage:	7.4 V
Nominal amperage:	1100 mAh
Charge cycles:	Approx. 300
Operating temperatures:	0 - 40° C (32 - 104° F)
Dimensions:	38 x 55 x 21 mm (1.5 x 2.2 x 0.8 in.)
Weight:	Approx. 70 g (2.5 oz.)

Compact Power Adapter CA-560

Input voltage:	AC 100 - 240 V (50/60 Hz)
Rated output:	9.5 V / 2.7 A
Operating temperatures:	0 - 40° C (32 - 104° F)
Dimensions:	57 x 28 x 104 mm (2.2 x 1.1 x 4.1 in.) (camera body only)
Weight:	Approx. 180 g (6.3 oz.)

Wireless Controller WL-DC100

Power supply:	Lithium button battery CR2025
Operating temperatures:	0 - 40° C (32 - 104° F)
Dimensions:	35 x 6.5 x 56.6 mm (1.4 x 0.3 x 2.2 in.)
Weight:	Approx. 10 g (0.4 oz.)

CompactFlash™ Card



Card slot type:	Type I
Dimensions:	36.4 x 42.8 x 3.3 mm (1.4 x 1.7 x 0.1 in.)
Weight:	Approx. 10 g (0.4 oz.)

Charge Adapter / Car Battery Cable Kit CR-560 (Optional)

• Charge Adapter CG-560

Input voltage:	DC 9.5 V
Input current:	DC 2.5 A 2.7 A (DC 9.5V when charging the battery pack)
Nominal output:	DC 8.4 V 1.6 A
Operating temperatures:	0 - 40° C (32 - 104° F)
Dimensions:	93 x 36 x 71 mm (3.7 x 1.4 x 2.8 in.)
Weight:	Approx. 140 g (5.0 oz.)

• Car Battery Cable CB-560

Supported vehicles:	Cigarette lighter socket powered by a negative ground, DC 12 V or 24 V car battery
Fuse:	125 V / 4 A  
Length:	Approx. 1.8 m (6.0 ft.)
Weight:	Approx. 80 g (2.8 oz.)

Wide Converter WC-DC58 (Optional)

Magnification:	Approx. 0.8x
Focal length:	∞
Lens configuration:	3 groups 3 pieces
Focusing range (from tip of lens):	10 mm - ∞ (0.4 in. - ∞) (when attached to a PowerShot G1 at maximum wide angle)
Thread diameter:	58 mm Standard filter threads (Conversion Lens Adapter LA-DC58 is required to install the lens on a PowerShot G1)
Dimensions:	Approx. \varnothing 80 x 40 mm (\varnothing 3.1 x 1.6 in.)
Weight:	Approx. 157 g (5.5 oz.)

Tele-converter TC-DC58 (Optional)

Magnification:	Approx. 1.5x
Focal length:	∞
Lens configuration:	2 groups 3 pieces
Focusing range (from tip of lens):	400 mm - ∞ (1.3 ft. - ∞) (when attached to a PowerShot G1 at maximum telephoto)
Thread diameter:	58 mm Standard filter threads (Conversion Lens Adapter LA-DC58 is required to install the lens on a PowerShot G1)
Dimensions:	Approx. \varnothing 65 x 37 mm (\varnothing 2.6 x 1.5 in.)
Weight:	Approx. 117 g (4.1 oz.)

Close-up Lens 250D (58 mm) (Optional)

Focal length:	250 mm
Focusing range (from tip of lens):	120 - 200 mm (4.7 x 7.9 in.) (when attached to a PowerShot G1)
Thread diameter:	58 mm Standard filter threads (Conversion Lens Adapter LA-DC58 is required to install the lens on a PowerShot G1)
Dimensions:	Approx. \varnothing 60 x 12 mm (\varnothing 2.4 x 0.5 in.)
Weight:	Approx. 80 g (2.8 oz.)

- All data is based on Canon's standard testing methods. Subject to change without notice.

Index

A

AEB Mode 67
AE Lock 69
AF Mode 102
Aperture-Priority AE (**Av**) 60
Aperture Settings 60
Auto Mode (**AUTO**) 37
Auto Exposure Bracketing (AEB Mode) 67
Autofocus 73
 Difficult Subjects 73
Auto Replay (Slide Show) 86
AV Out Terminal 10, 91

B

Battery Check Icon 20
Battery Pack 18
 Charging 18
 Handling Precautions 19
 Installing 20
 Performance 21
Beep On/Off 34, 104
Black and White Mode (**BW**) 45
Brightness 104
 LCD Monitor 104
Built-in Flash 10, 41
Button Battery 122

C

Camera Care and Maintenance 124
CF Card 26
 Formatting 94, 105
 Handling 27
 Installing 26
 Recording Capacity 26
Charge Adapter/Car Battery Cable Kit 23
Cleaning 124
CompactFlash™ Card 26
Compact Power Adapter 22
Components Guide 10
Compression 54, 101
Computer 113
 Downloading 113, 114
 Interfaces 116, 117
 System Requirements 116
Continuous Mode (**C**) 52
Contrast 77, 102
Conversion Lens Adapter 110, 111
Creative Zone 13

D

Date/Time 30
Date Battery 122
DC Cable 23
DC IN Terminal 10, 18
Digital Print Order Format (DPOF) Settings
 95, 103
Digital Terminal 10, 119, 120, 121
Digital Zoom 53, 101
Diopter Adjustment Lever 12, 38
Display Modes 15
 Detailed 15
 Simple 15
Display Panel 14
Downloading Images to a Computer 113
DPOF 95

E

Erasing
 All Images 93, 103
 Displayed Images 9, 92, 103
 Single Images 92, 103
Error Codes 127
Exposure
 AEB 67
 AE Lock 69
 Aperture-Priority AE (**Av**) 60
 Compensation 54, 101
 Flash Exposure Compensation 68
 Shutter Speed-Priority AE (**Tv**) 58
 White Balance 64
Exposure Compensation 63
Externally Mounted Flash 108

F

FE Lock 70
File Format 56, 101
File No. Reset 78, 102
File Numbers 78
Flash 41
 Built-in 41
 Externally Mounted 108
Flash Exposure Compensation 68
Focal Length 40

- Focus
 - Auto 73
 - Continuous 76
 - Lock 73
 - Manual 74
 - Settings 76
 - Single 76
- Format 94, 105

H

- Hot Shoe 12, 108
- Household Power Source 22

I

- Image Characteristics 77
 - Contrast 77
 - ISO Speed 77
 - Saturation 77
 - Sharpness 77
- Image Zone 13
- Indicators 12
- Information View 16
- Interface 116
 - Cables 116
 - CF Card 117
 - Serial 117, 120
 - USB 117, 118
- ISO Speed 77, 101

J

- Jump 83

L

- Landscape Mode (🏞️) 44
- Language Settings 105
- LCD Monitor
 - Brightness 104
 - Using 32
- Lens Cap 28
- Lens installation 111
 - Conversion Lens Adapter 111
 - Close-Up 111
 - Tele-converter 110
 - Wide converter 110

M

- Macro Mode (🔍) 50
- Magnifying Images 81
- Main Dial 13
- Manual
 - Exposure (M) 62
 - Focus (MF) 74
 - Setting Image Characteristics 77
 - Shooting Mode 62

- Menu
 - List of Options 101
 - Play 36
 - Rec 36
 - Selecting Menus and Settings 35
 - Set up 36
- Message Codes 127, 128

- Metering
 - Center-Weighted Averaging 72
 - Spot 72
- Mode Dial 13
- Movie (🎬) 49
 - Shooting 49
 - Replaying 84

N

- Night Scene Mode (🌃) 44

P

- Pan Focus (👁️) 43
- PC Connection Mode 13
- Play 80
- Portrait Mode (👤) 43
- Program AE (P) 57
- Protect 90, 103
- Print Settings 95
 - Selecting Images 95
 - Print Style 98
 - Resetting 100
- Power On/Off 29
- Power Save 29, 104

R

- RAW File Format 56
- Recording File Format 56
- Red-Eye Reduction Function 41
- Remote Sensor 10, 107
- Replay
 - Jumping 83
 - LCD Monitor 80
 - Magnifying Images 81
 - Movies 84
 - Multi Replay 82
 - Rotating 85
 - Single Image Replay 80
 - Slide Show 86
 - Switching from Shooting Mode 31
 - TV 91
 - Volume 104
- Resolution 54, 101
- Rotate 85, 103

S

Saturation 77, 102
 Self-Timer 51
 Serial Port 117, 120
 Sharpness 77, 102
 Shooting 31
 Checking Images 39
 Switching from Replay Mode 31
 TV Monitor 91
 Shooting Mode 79
 Functions Available 79
 Shutter
 Shutter Speed Priority AE (Tv) 58
 Speed 58
 Volume 34, 104
 Shutter Button 34
 Pressing Halfway 34
 Pressing Fully 34
 Single Image Replay 80
 Slide Show 86, 103
 Play Time 89
 Repeat 89
 Selecting Images 88
 Starting 86
 Soft Case 28
 Speaker 10
 Specifications 130, 131, 132, 133
 Spot Metering 72
 Stitch Assist Mode (□) 46
 Framing Subjects 46
 Shooting 47
 Strap 28

T

Telephoto 40
 Tele-converter Lens 110
 Troubleshooting 125

U

USB Port 118, 119

V

Video System 105
 Viewfinder
 LCD Monitor 12, 15, 32
 Optical 11, 38
 Volume
 Replay 104
 Shooting 104

W

WAV Files 17
 White Balance 64
 Wide Angle 40
 Wide converter Lens 110
 Wireless controller 106
 Installing / Removing the Battery 106
 Replay 107
 Shooting 107

Z

Zoom 40

Canon Customer Support

Canon Inc.

30-2 Shimomaruko 3-chome, Ohta-ku, Tokyo
146-8501, Japan

NORTH AMERICA

Canon U.S.A., Inc.

Canon Customer Care Center
Phone (US): 1-800-828-4040 (Available Mon. - Fri., 9 AM to 8 PM Eastern Time)

Canon Canada Inc.

Phone (Canada): 1-800-OK-CANON (1-800-652-2666) (24 hours/day, 7 days/week)

EUROPE

Europe, Africa & Middle East

Canon Europa N.V.

PO Box 2262, 1180 EG Amstelveen, The Netherlands

Canon (UK) Ltd.

Helpdesk
Tel.: 08705 143 723 (Calls may be recorded.) Fax.: 08705 143 340

Canon France S.A.

Hotline : 01.41.99.70.70
Tél : 01.41.99.77.77 Télécopie : 01.41.99.79.51

Canon Photo Vidéo France S.A.

Support Client : 01.41.30.15.18
Fax : 01.41.30.15.98

Canon Deutschland GmbH

Canon-Hotline-Service:
Customer Support: (02151) 349-555
Info Desk: (02151) 349-566 Fax: (02151) 349-588

Canon Euro-Photo GmbH

Customer-Support: (02154) 495-482 or 483 Fax: (02154) 495-489

Canon Italia S.p.A.

Pronto Canon: 02 8249 2000

Canon Belgium N.V. / S.A.

Helpdesk: 0900-10627
Tel.: (02) 722.04.11 Fax: (02) 721.32.74

Canon Luxembourg S.A.

Tel.: (352) 48 47 961 Fax: (352) 48 47 96232

Canon Nederland N.V.

Helpdesk: 023 - 5 681 681
Tel.: 023 - 5 670 123 Fax: 023 - 5 670 124

Canon Danmark A/S

Phone: +45 44882400 e-mail: helpdesk@canon.dk

Canon España S.A.

Help Desk: 906 301 255
Fax: (91) 411 76 65 E-mail: helpdesk1@btlink.net

Canon Norge as

Tlf. 22 62 93 21 Faks: 22 62 06 15

E-mail: helpdesk@canon.no

Finland**Canon OY**

Puhelin: 010 54420 Fax: 010 544 4571

Help Desk: 0600 0 22606 (14,80 mk/min+pvm) Help Desk: 0600 0 22666 (enint. 40mk/puhelu+pvm)

Sähköposti: helpdesk@canon.fi

Canon (Schweiz) AG

Tel. 01-835-6161 Fax 01-835-6526 Hotline 0900 57 55 20

Canon Svenska AB

Stensättravägen 13, S-127 88, Skärholmen, Sweden

Austria**Canon GmbH**

Oberlaaerstraße 233 A-1100 Vienna

Tel: 01 680 88-0 Fax: 01 680 88-308

OCEANIA**Canon Australia Pty. Ltd.**

Info-Line: (02) 9805 2864

Canon New Zealand Ltd.

Info-Line: 0900-522666

ASIA**Canon Singapore Pte. Ltd.**

79 Anson Road, #09-01 / 06, Singapore 079906

Phone: (65) 532 4400 Fax: (65) 221 7577

Canon Hongkong Co., Ltd.

9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong

Phone: 852-2739-0802 Fax: 852-2369-7701

Canon Marketing Services

No.1 Jalan Kilang Timor, #09-00, Pacific Tech Centre, Singapore 159303

Phone: (65) 799 8888 Fax: (65) 273 3317

Canon Marketing (Malaysia) Sdn. Bhd.

Wisma General Lumber, Block D, Peremba Square, Saujana Resort, Section U2, 40150,

Shah Alam, Selangor Darul Ehsan, Malaysia

Phone: (60) 3 744 6000, (60) 3 745 0055

Fax: (60) 3 745 0505

Canon Marketing (Thailand) Co., Ltd.

10th Floor, Bangkok City Tower, 179/34-45 South Sathorn Road, Bangkok 10120, Thailand

Phone: (662) 344 9999 Fax: (662) 344 9910

Canon Marketing (Hongkong) Co., Ltd.

10/F, Mirror Tower, 61 Mody Road, Tsimshatsui East, Kowloon HongKong

Phone: 852-2170-2828 Fax: 852-2723-9684

FCC Notice

(Digital Camera, Model PC1004)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable with the ferrite core provided with the Digital Camera is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516) 328-5600

Canadian Radio Interference Regulations

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

Réglementation canadienne sur les interférences radio

CET APPAREIL NUMERIQUE DE LA CLASSE B RESPECTE TOUTES LES EXIGENCES DU RÈGLEMENT SUR LE MATERIEL BROUILLEUR DU CANADA.

Canon